

PRICE \$5.00

PROPERTY OF
AERONUTRONIC

METROLOGY
LABORATORY

RECEIVED: _____

**POWER
SUPPLY**



INSTRUCTION MANUAL



131-38 SANFORD AVENUE • FLUSHING, N. Y. 11352
Area Code 212 IN 1-7000 • TWX # 212-539-6623

TEST EQUIP. MAINT.



SERIES CONNECTION

Keeco Voltage Regulated Power Supplies can be connected in series for increased voltage, provided the specified limits on the voltage to chassis are not exceeded. When series connected, supplies should be protected by means of a semiconductor diode, reverse-connected across the output terminals of each power supply. The peak reverse voltage (PRV) rating of this diode should be chosen to be at least as large as the voltage rating of the supply to which it is connected. The forward (continuous) current rating of the diode should be capable of carrying the largest short circuit current of the series inter-connected supplies.

INSTRUCTION MANUAL

VOLTAGE/CURRENT REGULATED
POWER SUPPLY

MODEL KS8-50M

SERIAL NO.

TABLE OF CONTENTS

<u>Section</u>		<u>Page No.</u>
1.0	SPECIFICATIONS AND DESCRIPTIONS	
1.1	Electrical and Physical Specifications.....	1.1-1
1.2	Terminals and Controls.....	1.2-1
1.3	Special Features.....	1.3-1
2.0	OPERATING INSTRUCTIONS	
2.1	Installation and Operating Instructions.....	2.1-1
2.2	Special Operating Procedures.....	2.2-0
	Remote Error Sensing.....	2.2-1
	Programming Output Voltage With External Resistance.....	2.2-2
	Programming Output Voltage With External Voltage.....	2.2-3
	Programming Output Current With External Resistance.....	2.2-5
	Programming Output Current With External Voltage.....	2.2-6
	Programming Output Current With External Sensing.....	2.2-7
	Parallel Operation (Master-Slave).....	2.2-9
2.3	Internal Adjustment Procedures.....	2.3-1
3.0	Circuit Description.....	3.1-1
4.0	Power Supply Measurements.....	4.1-1

REPLACEMENT PARTS

SERVICE DIAGRAMS

SCHEMATIC DIAGRAM

©KEPCO, INC. 1963

STANDARD POLICY COVERING REPRODUCTION
AND USE OF TECHNICAL DATA
FOR KEPCO MANUFACTURED EQUIPMENT

The technical data submitted, including manuals, parts information, and mechanical and electrical drawings, is furnished solely for the purpose of effecting maintenance and/or repairs to the apparatus therein described and the purchaser or the Government shall not reproduce, use, or disclose the said technical data, in whole or in part, for any other purpose. Such technical data shall not be used for promotional procurement, development or manufacturing purposes, nor shall the purchaser or the Government permit the reproduction, use, or disclosure of any part of said technical data by others. The purchaser shall notify the Government of the purchaser's limited right in the use of said technical data for aforesaid purposes. In the event that any part of this technical data is used by anyone for other than the above authorized purposes, the purchaser will give all assistance possible for the prosecution of action against any unauthorized use thereof.

KEPCO, INC.
VOLTAGE/CURRENT REGULATED POWER SUPPLY

MODEL KS 8-50M

The Model KS 8-50M is a DC Power Supply that provides highly regulated voltage or current with continuous high resolution adjustments in either mode of operation. Automatic crossover between constant voltage and constant current is provided with a panel indication of the specific operating mode. Accessible terminals enable remote connections for programming or system interconnections with other devices. Built-in forced air cooling with lateral circulation provides positive cooling for continuous operation at any output within the specified ranges.

- DC OUTPUT: 0-8 volts, continuously adjustable;
resolution: 0.05% of maximum output.
0-50 amperes, continuously adjustable;
resolution: 0.05% of maximum output.
- AC INPUT: 105-125 (210-250) volts, 50-65 cps, single phase. 16 amperes at 125V AC. 8 ampere at 250V AC.
- CONTROL RATIO: 100 ohms/volt.
- VOLTAGE-COMPARISON-BRIDGE CURRENT: 10 milliamperes.
- AUTOMATIC CROSSOVER

VIX INDICATORS:

A pair of front-panel signal lamps with one lamp lighted during voltage regulated operation, and the other during current regulated operation (internal current sensing only). Crossover from one mode to the other is signalled by the extinction of one lamp and the lighting of the other.

VIX REMOTE SIGNAL:

A pair of rear-panel pin jacks, labelled "V" and "I". Pin V is 8 volts* positive with respect to pin I during voltage regulated operation. Pin I is 8 volts*positive with respect to pin V during current regulated operation. Maximum loading 10 K ohms; must be isolated from ground and the output terminals of the power supply. Crossover from one mode to the other is signalled by an abrupt polarity reversal.

- ISOLATION: Units can be connected in series up to 500 volts between chassis and either output terminal.

*ADD: $\pm 10\%$,

CONSTANT VOLTAGE OPERATION: (Specified performance at the rear output terminals)

- LINE REGULATION: Less than 0.01% output voltage change for $115 \pm 10V$ or $230 \pm 20V$ AC line variation, at any output voltage within the specified range.
- LOAD: Less than 0.01% or 0.5 millivolt output voltage change, whichever is greater for NO LOAD to FULL LOAD change at any output voltage within the specified range.
- STABILITY: Output varies less than 0.01% or 3 millivolts whichever is greater over a period of 8 hours after warmup. Measured at constant line voltage, load, and ambient temperature.
- RIPPLE: Less than 1.0 millivolt rms.
- OUTPUT IMPEDANCE: Less than 0.000016 ohm, DC to 100 cps; 0.005 ohm, 100 cps to 1 KC; 0.02 ohm + 0.4 μh , 1 KC to 100 KC.
- RECOVERY TIME: 50 microseconds.
- AMBIENT OPERATING TEMPERATURE: $-20^{\circ}C$ to $+50^{\circ}C$ maximum.
- TEMPERATURE COEFFICIENT: Output voltage changes less than 0.01% per $^{\circ}C$.

CONSTANT CURRENT OPERATION: (External Sensing)

- CURRENT REGULATED OUTPUT RANGE: 10 milliampere to 100% of maximum rated current.
- VOLTAGE COMPLIANCE: 100% of maximum output voltage (For any selected current value the output voltage is automatically varied from 0 to 100% of maximum output voltage, as required to regulate the output current).
- CURRENT REGULATION:
 - LINE: Less than 0.01% output current change for $115V \pm 10V$ or $230V \pm 20V$ AC line variation, at any output current within the current regulated range.
 - LOAD: Less than 0.02% output current change, for maximum change in load resistance at any output current within the current regulated range.
- CURRENT RIPPLE: Less than 0.1% of maximum current rms.
- CURRENT SENSING VOLTAGE; V_s : 1.0 volt across external resistor, R_s .

CONSTANT CURRENT OPERATION: (Internal Sensing)

....CURRENT REGULATED OUTPUT RANGE: Panel controls provide automatic cross-over from constant voltage to constant current from less than 0.5% to 100% of the maximum specified current.

....VOLTAGE COMPLIANCE: From 0 volts to the voltage control setting.

....CURRENT REGULATION:

LINE: Less than 0.02% or 1 milliamperere output current change for 115V $\pm$ 10V or 230V $\pm$ 20V AC line variation at any output current within the current regulated range.

LOAD: Less than 0.02% or 1 milliamperere output current change for maximum change in load resistance at any output current within the current regulated range.

....CURRENT RIPPLE: Less than 0.1% of maximum current, rms.

....CURRENT SENSING SAMPLE; Vs: 0.5 volt across internal sensing resistor.

PHYSICAL SPECIFICATIONS:

....DIMENSIONS: 7"H X 19"W X 16"D.


....WEIGHT: 81 pounds.

....FINISH: Gray Hammertone.



Digitized by the Internet Archive
in 2026

https://archive.org/details/manualsplus_12506

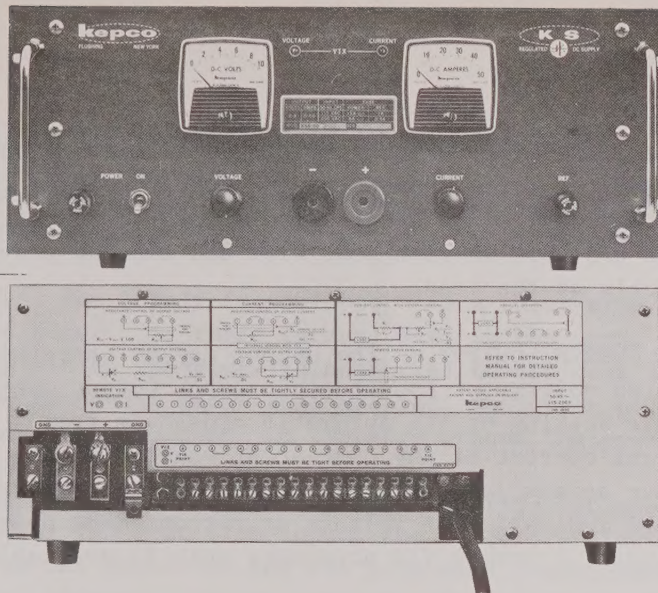

1.2 TERMINALS AND CONTROLS

- POWER: Toggle switch turns power on.
- FUSE, MAIN: Protects input to main power transformer.
- FUSE, REF.: Protects input to reference control transformer.
- VOLTAGE ADJUST: Ten-turn control on front panel for setting the output voltage.
- CURRENT ADJUST: Ten-turn control on front panel for setting the output current.
- INDICATORS: VIX indicators to display voltage or current operating mode.
- OUTPUT TERMINALS: Heavy duty binding posts with 3/4" spacing for output and ground connections.

On Back of Unit:

- OUTPUT TERMINALS: Heavy duty barrier strip for output and ground connection.
- CONTROL TERMINAL STRIP: Sixteen terminal barrier strip for connections to circuit terminals required for special operating applications.
- VIX CONNECTORS: Connecting pin jacks (.08") for remote circuit operation of current/voltage operating mode indicators or process control.
- AC INPUT LINE CORD: Flexible, three-wire line cord, with grounding plug, for connection to AC line. Third wire in cord is grounded to chassis. Connector similar to Hubbel type #5266.

1.3 SPECIAL FEATURES

REMOTE ERROR SENSING.- External error sensing terminals located on the control terminal strip allow the error sensing of the output voltage to be performed remotely at the load. This enables the supply to regulate for voltage drops of up to 0.5 volt in each load wire and thereby provide specified regulation directly at the load.

CONSTANT VOLTAGE/CONSTANT CURRENT OUTPUT.- The output may be operated at either constant regulated voltage or constant current. Output controls on front panel enable setting of the automatic crossover from constant voltage to constant current at any current or voltage within the specified ranges. Rear access jacks provide connection to internal control circuits for remote indication of voltage or current mode operation and for control applications. A remote VIX accessory unit is available for connection to these jacks.

CONSTANT CURRENT OPERATION (External Sensing)- By the use of a current sensing resistor of optimum value and a current control resistor, both externally connected, the output can be converted to provide constant current only through a varying load.

PROGRAMMING BY RESISTANCE.- The output voltage can be programmed or controlled remotely by an externally connected resistance. The externally connected resistance will program the output voltage at a constant resistance-to-voltage ratio of 100 ohms-per-volt over the entire specified range of the unit.

PROGRAMMING BY VOLTAGE.- The output voltage can be programmed by another voltage, for special programming application such as Complementary Tracking, Compliance Voltage Extension for Constant Current, etc.

PROGRAMMING CURRENT.- The constant output current function with internal sensing can be programmed by an external control, either voltage or resistance.

PARALLEL OPERATION.- The output of two Model KS units can be connected in parallel across a common load to obtain higher current. Special terminals in the Pass Driver control circuit allow the series pass elements to be parallel driven by a common control signal, automatically providing equal distribution of the current drawn from each supply. Automatic paralleling by means of the crossover characteristic is also possible with no special interconnection.


OVERLOAD PROTECTION.- Current limiting automatically limits the output current during overload to the value at which the Current Control is set. In the (internal sensing) constant current mode, voltage limiting automatically limits the output voltage during overload (open circuit) to the value at which the voltage control is set. This allows the supply to continue operating, without damage and without shutting off, during an output overload up to a full short circuit (or open circuit).

2.1 INSTALLATION AND OPERATING INSTRUCTIONS

This Power Supply has been completely inspected and tested at the factory prior to packing, and is shipped ready for installation and operation.

AC POWER.- The Supply is equipped with a three-wire safety line cord and polarized plug. The third (green) wire in the cord, connected to the grounding pin on the plug, is connected to the case and chassis. When using the two-prong receptacle adapter, the green pigtail wire attached thereto must be grounded, to properly ground the power supply.

The Power Supply is normally shipped for 115 volt operation with appropriate fusing. For 230 volt line input, the power transformer, T201, primary windings must be series connected and the reference transformer, T501, primary tap connection changed. Remove Power Supply bottom plate and locate terminals at underside of unit. Change connections as shown on diagram for required input voltage.

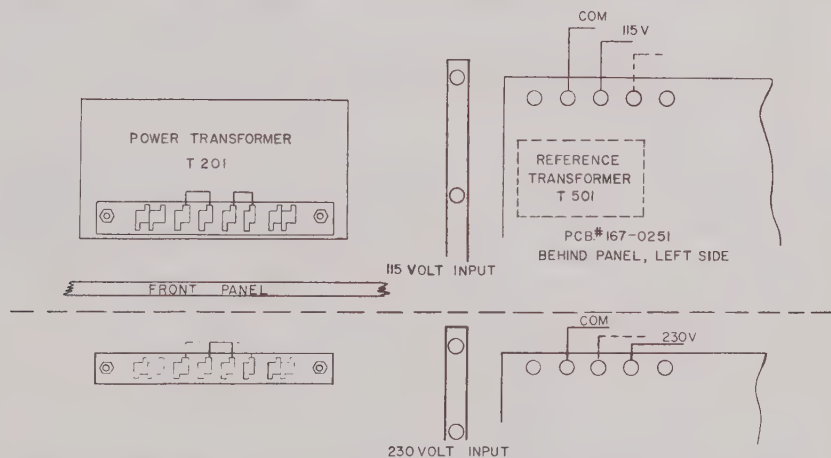

GROUNDING.- The DC output is isolated from the AC power line and from any direct connection to chassis or ground. The positive side of the output is connected to chassis through a capacitor in series with a resistor. The maximum voltage that can be supported between either output terminal and chassis ground is 500 volts. Either side of the DC may be grounded. Grounding connection is provided at the panel binding post or rear terminal strip.

DC LOAD TERMINALS.- The load may be connected to either the front panel binding posts or to the rear terminal strip. The connecting leads should be carefully constructed, keeping in mind the voltage drops that can develop at high current with wires of insufficient size or poor terminal connections. (See Remote Error Sensing).

COOLING.- The power transistors and rectifier assembly are maintained within proper operating temperatures by a built-in fan, which circulated air laterally through the unit. Be sure all panel openings are clear to permit proper circulation of air.

A protective thermostat, located within a pass transistor assembly, is interconnected with a power relay interlock to remove line power in the event of excessive ambient temperature or a failure in the cooling system. If this action occurs, re-cycling of the power switch is required after proper thermal conditions are restored.

STANDARD OPERATION.- The supply is shipped with six removable jumper links in place between terminals (2)-(3), (4)-(5), (6)-(7), (9)-(10), (11)-(12), (13)-(14), and (15)-(16), on the 16-terminal control terminal strip at the back of the unit. Links must be in place for standard operation.

NOTE: The terminal screws and links should be tight to insure proper operation. A loose wire connection or jumper link can cause the unit to function improperly. Be sure to put any links that have been removed back in place when changing from one mode of operation to another.

TURN ON.- The Supply may be turned on and off with the front panel Voltage and Current controls turned to any settings without harm.

SETTING OUTPUT VOLTAGE AND CURRENT.- Output voltage and current are both independently adjustable by means of the appropriately labeled front panel controls. Depending upon the load resistance, only one of these adjustments will exercise control. When the VOLTAGE VIX lamp is lit, the voltage control adjustment will control the voltage to the load and the Power Supply will operate as a voltage regulator. In either mode the "other" control will have no effect on the output except to act as a limit.

In voltage regulation mode, load current increases with decreasing load resistance until the setting of the current control adjustment has been reached. At this point the Power Supply will crossover into current regulation mode. The voltage VIX lamp is extinguished and the current VIX lamp is lighted.

If crossover is not desired within the rated output voltage and current range of the power supply, the inoperative control should be set fully clockwise so that its limiting point is outside of the operating range. In practice, set the controls so the desired VIX lamp remains lighted throughout the range of desired loads.


2.2 SPECIAL OPERATING PROCEDURES

Complete accessibility to the power supply's internal control elements is provided by the 16-terminal connector at the rear of the unit. On the following pages of this section are described a group of special connections that enable control of the power supply by external means.


Included herewith is a simplified diagram of the basic internal control circuits shown in relation to the accessible terminal connections for ease in understanding the overall operation.

SIMPLIFIED DIAGRAM OF MODEL KS AUTO-CROSSOVER POWER SUPPLY

WITH REAR TERMINAL CONNECTION DETAIL

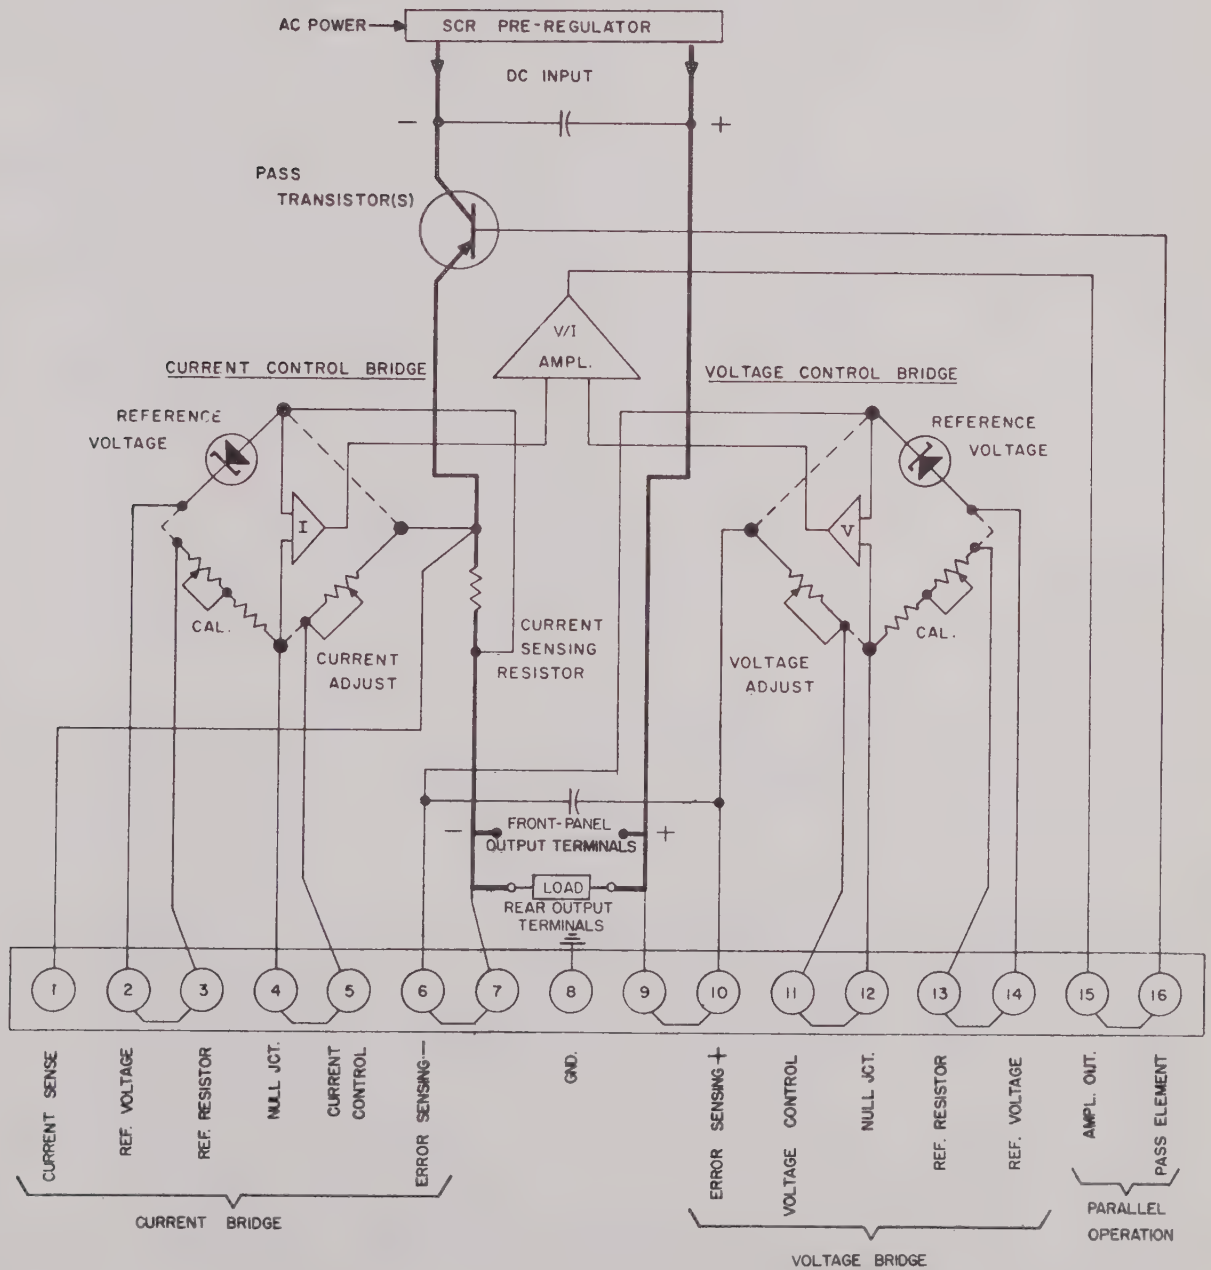

REMOTE ERROR SENSING

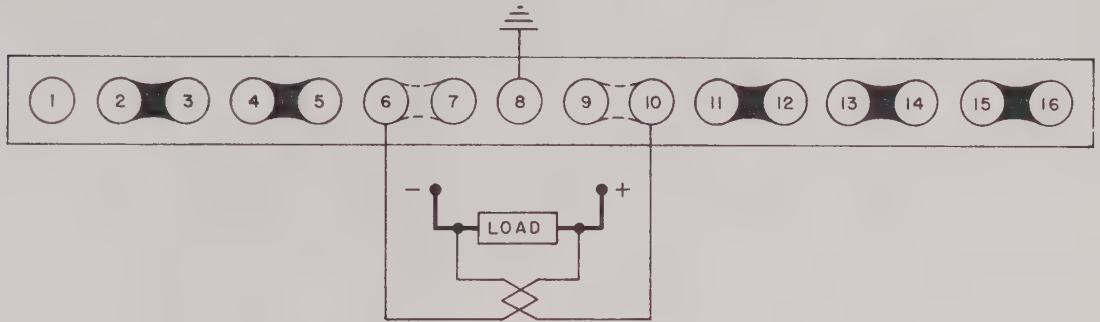

Shielded Twisted Pair

The Error Sensing terminals are the input terminals to the Supply's regulating system for sensing changes or errors in the output voltage being regulated. Normally, the Error Sensing is connected to sense the output voltage directly at the rear output terminals. Connected in this manner, specified regulation will appear at these terminals while the voltage at the load will be reduced by voltage drops due to the resistance in the wires between the output terminals and the load.

The Error Sensing input can be connected to sense the voltage directly at the load, thereby maintaining optimum regulation at the load instead of at the Supply's terminals. Up to 0.5 volts drop in each load connecting lead can be compensated by using Remote Error Sensing.

PROCEDURE:

1. Remove the two Remote Error Sensing jumper links connected between terminals (6)-(7) and (9)-(10) at the back of the unit. These links provide error sensing of the voltage at the Supply's terminals and must be in place when Remote Error Sensing is not used.
2. Using a twisted wire pair, separated from the main load connecting wires, connect the Error Sensing terminals (6) and (10) to the DC terminals at the load. Be sure to maintain polarity, i.e., connect the Positive Error Sensing (10) to the positive side of the load, and Negative Error Sensing (6) to the negative side of the load. The Remote Sensing wires are used to transmit voltage only and do not carry load current. There is a constant current (bridge current) flowing through the Remote Sensing wires.


NOTE: The unit should never be allowed to operate with an open circuit between the Remote Error Sensing terminal and its respective output terminal. An open connection

will degrade the regulating function and cause the output voltage to rise. A pair of diodes internally bridge the error sensing connections, limiting the output voltage rise to approximately 1.5 volts. Output ripple is increased sharply, also.

When operating the power supply with remote error sensing, do not permit the load connecting wires to become disconnected from the load while the error sensing leads remain connected. If this occurs, the power supply will attempt to maintain current flow through the sensing lead and damage to the power supply may result.

Twisted wires for the load connecting leads should be used to reduce transient recovery time and enhance stability of operation.

PROGRAMMING OUTPUT VOLTAGE WITH EXTERNAL RESISTANCE

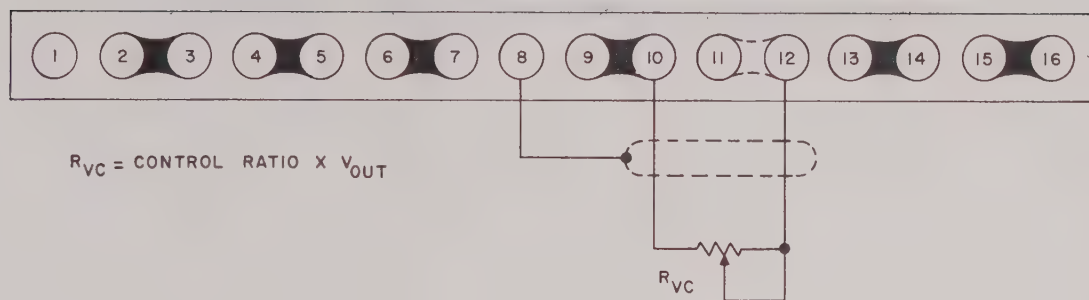

The output voltage may be programmed, or controlled, over its entire range by means of an externally connected resistance. The external control may be continuously adjustable or stepped, and may be remotely located. When connected, it will function in place of the front panel Voltage Adjust control.

The static, or steady state, current through the programming resistance is equal to the bridge current of the model: the reciprocal of the programming ratio, or 1 ma for 1000 ohm/volt units, 10 ma for 100 ohm/volt units.

The external resistance will control the output voltage at an ohm/volt control ratio specified for the Model. The exact control ratio is adjustable a small amount around the specified value in order to permit adjustment for component tolerances. This is done by means of the internal Maximum Voltage Adjust resistor. The control ratio will remain constant over the entire output range of the unit. It is usually adjusted, either for internal or external control, at maximum rated output voltage. (See Internal Adjustment Procedures).


PROCEDURE:

1. Remove the jumper link connected between terminals (11)-(12) on the back of the unit. This disconnects the internal Voltage Adjust control from the circuit.
2. Using shielded, twisted-pair wire, connect the external programming resistance to terminals (10)-(12). Connect the shield to the chassis, terminal (8).

If fixed values of resistance are to be switched for stepping the voltage, the switching device should have shorting contacts (make before break) so the circuit does not open during transfer. Programming large excursions of voltage by switching contacts or other rapid switching means, requires the use of high wattage resistors for the lower voltages that are programmed.

These are necessary to absorb the higher voltage charge stored in the output capacitors. Similarly, manually operated or servo driven potentiometers of low current capacity must be restricted in their speed of rotation by friction or other means to prevent potentiometer burn-out. These precautions are particularly significant when the supply is lightly loaded.

PROGRAMMING OUTPUT VOLTAGE WITH EXTERNAL VOLTAGE

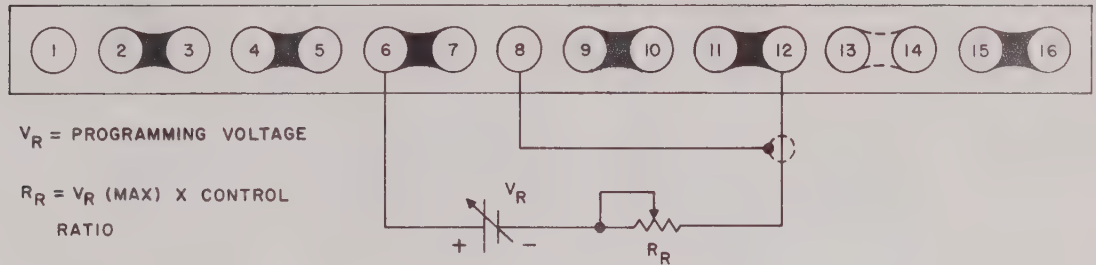

The output voltage of this model can be controlled by an external voltage source. The output voltage of the supply will follow in constant proportion the voltage of the programming source for an approximate 10:1 change in output.

The proportion between the two voltages will be constant, but adjustable. It is determined by the proportion established between the resistance of an added external coupling resistor (R_R) and the resistance at which the output voltage control potentiometer (R_{VC}) is set. The proportion may be set at unity (1:1) in which case the output voltage will be equal to the programming voltage, or it may be set for any other ratio, within the voltage capabilities of the unit.

This mode of programming may be used in conjunction with an external Voltage Control resistance (See Programming Output Voltage by External Resistance) to provide programming control of both the magnitude and the ratio of the voltages.

It is required that the positive side of the programming voltage source be connected to the negative side of the programmed voltage. Also, the programming source must be capable of providing a maximum control current equal to the reciprocal of the control ratio for the Model.

PROCEDURE:

1. The proportion maintained between the output voltage and the programming voltage is expressed very closely by the following:

$$\frac{V_O}{V_R} = \frac{R_{VC}}{R_R}$$

where: V_O = output voltage to be programmed.

V_R = Programming voltage.
 R_{VC} = Voltage Control resistance (internal or external).
 R_R = External coupling resistor.

2. a. The values of V_O and V_R are usually given by the requirements of the particular application.

b. The value of R_R is determined by the Control Ratio for the model using the programming voltage at its maximum value:

$$R_R = V_R (\text{max.}) \times \text{Control Ratio (ohm/volt)}$$

c. R_{VC} is equal to $V_O \times \text{Control Ratio}$.


3. a. Connect the positive side of the programming voltage (V_R) to terminal (6). Using shielded wire, connect the external coupling resistor (R_R) between the negative side of V_R and terminal (12) on the programmed supply; connect the shield to ground (8).

b. Remove the jumper link connected between terminals (13)-(14) on the programmed supply.

c. On the programmed supply set the voltage control (either internal or external) approximately for the maximum value of voltage to be programmed.

d. Turn on the programmed supply and the programming voltage source. With the programming voltage set to its maximum value, adjust the voltage control on the programmed Power Supply to establish the desired ratio. The programmed output voltage should track variations in the programmed voltage at the proportion established over a range of 10:1 change in output. If a wider range of tracking is desired, it may be necessary to re-establish the ratio of output to control voltage at a lower value.

PROGRAMMING OUTPUT CURRENT WITH EXTERNAL RESISTANCE

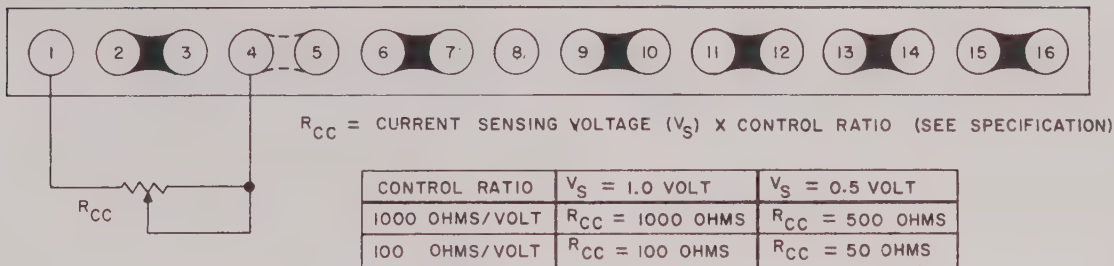

In this mode of operation an external resistance is connected to the unit to function as a Current Adjust control in place of the front panel control. The external control may either be fixed, stepped, or continuously variable, and may be located remotely from the Power Supply. If fixed values of resistance are to be switched, for stepping the current, the switching device should have shorting contacts (make before break), so the circuit does not open during transfer.

C A U T I O N


The Current Adjust control on the front panel is set by an internal adjustment so that at its maximum setting the maximum output current will be limited to a value slightly above the rated maximum current for the particular Model. When an external resistance is used it must be similarly adjusted at maximum, and the front panel control readjusted when returning to normal operation. (See Internal Adjustment Procedures)

PROCEDURE:

1. Using shielded, twisted-pair wire, connect external resistance to terminals (1)-(4); connect the shield to ground (8). Remove the jumper connected between terminals (4)-(5); this disconnects the front panel Current Adjust control from the circuit.
2. For continuously variable control, the external resistance should have the range as specified. This will have to be adjusted at the maximum setting before operation.

3. For step function control fixed resistance values can be approximated, subject to exact calibration of the current, by proportioning the maximum range in ohms for the fraction of maximum rated current to be programmed.
4. Adjust the external control in accordance with the Procedure for Internal Maximum Current Adjust.

PROGRAMMING OUTPUT CURRENT WITH EXTERNAL VOLTAGE

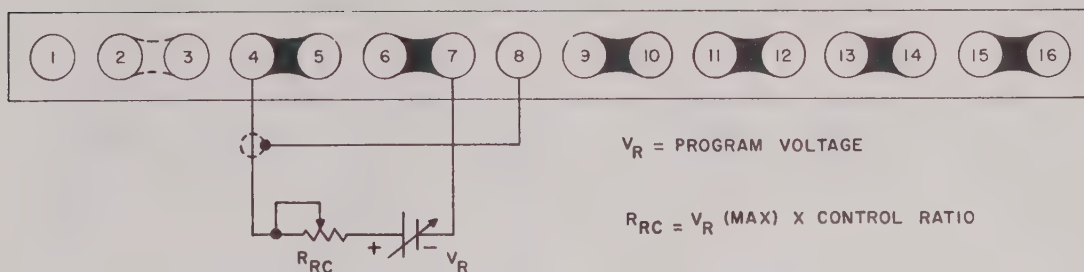


In this mode the output current is controlled by an external programming voltage. The voltage may have any value and is coupled to the unit through an externally connected resistor (R_{RC}). This resistor is determined by multiplying the maximum programming voltage by the control ratio for the Model. The actual resistor used should be adjustable, and should have a slightly higher (10%) value than calculated. It must be adjusted, at the maximum programming voltage, to calibrate for maximum current thereby preventing the maximum rated current from being exceeded.

PROCEDURE:

1. In order to calibrate the external coupling resistor (R_{RC}), the power supply must be pre-set with a load for maximum rated output current. With the front panel voltage and current controls both set to maximum, connect an adjustable load to the unit and set it to draw exactly the maximum rated current for the model. Leave the front panel controls and the load at that setting and turn the unit Off.
2. Remove jumper between (2)-(3). Connect the negative side of the programming voltage to terminal (7) on the back of the unit. Connect one end of the external coupling resistor, (R_{RC}), to the positive side of the programming voltage, and the other end to terminal (4).
3. With the programming voltage set to its maximum value, calibrate the maximum current as follows:
 - a. Set the external resistor R_{RC} to its highest value.
 - b. Turn the programming source and the power supply on. With R_{RC} at the higher resistance setting, output current should be some value below rated maximum. Adjust R_{RC} in the direction of decreasing resistance, increasing output current until rated maximum is obtained.
4. Varying the programming voltage down from its maximum value should vary the output current proportionately.

PROGRAMMING OUTPUT CURRENT WITH EXTERNAL SENSING

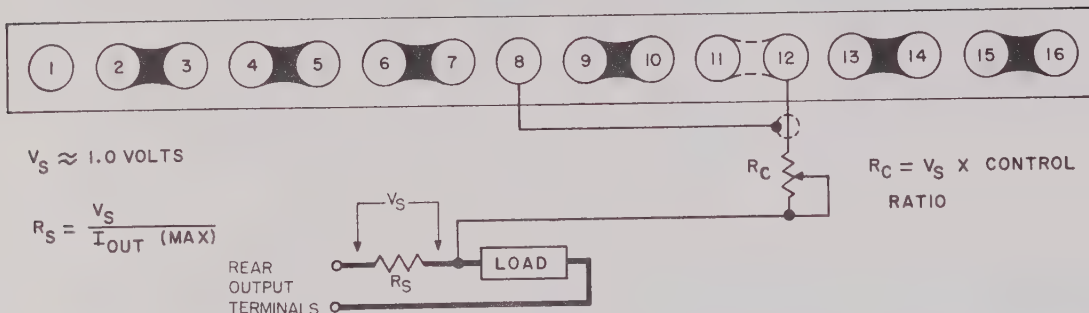

The output of the unit can be converted to provide constant current through a varying load with external current sensing. Current regulation of a high order can be achieved by optimizing the current sensing resistor for the lower values of output current.

In this mode the voltage control bridge of the power supply is being used to regulate current. The current bridge is disabled and consequently automatic crossover action does not occur and the voltage VIX indicator lamp will be lit.

A current sensing resistor, R_S , is connected to the output in series with the negative side of the load. A voltage, V_S , directly proportional to output current will be developed across R_S .

A current control resistor, R_C , is connected between the load end of R_S and the programming input terminal, (3). A constant current derived from the Power Supply's internal fixed reference voltage flows through control resistor R_C . This current is constant and determined entirely by the internal reference circuit, independent of the value of R_C and of output current. The voltage (V_C) across R_C will be equal to the resistance of R_C times 1/control ratio and will be constant at that value.

The regulating system in the supply will act to control current to the load so as to maintain the voltage V_S , across the sensing resistor equal to the constant voltage V_C , across the control resistor. By maintaining the voltage across R_S at a constant value, output current is maintained constant. For V_S a nominal 1.0 volt is recommended as a practical value, requiring that the resistance of R_C be equal to 1000 ohms for CK models and 100 ohms for KS models. By using a variable resistor for R_C , the voltage across it can be adjusted, providing a convenient means of varying the output current. This provides a variable range of current for any one value of sensing resistor, and allows the use of more readily available standard values of resistors for current sensing.

NOTE: R_C determines the sensing voltage that will be maintained across R_S . Varying this voltage varies the output current. However as this voltage is decreased, current regulation is degraded gradually and operation at sensing voltages below 0.1 volt is not recommended. A nominal 1.0 volt is chosen to be a practical value. Higher voltages do not appreciably improve regulation, while they do increase the dissipation requirements of the sensing resistor, and take more compliance voltage from the load.

PROCEDURE:

1. Determine the value of R_S on the basis of 1.0 volt divided by the maximum value of constant current that will be required. The resistor selected should have a power rating at least ten times its actual dissipation requirement, and should have a low temperature coefficient.


If the exact resistance calculated for R_S is an impractical value, use the nearest lower value available and adjust the current to the exact value required with the current control resistor, R_C .

2. Connect R_S in series, between the negative DC output and the load. Connect the current control resistor, (R_C), between the load end of R_S and the terminal (7) at the rear. Remove the jumpers connected between terminals (11) and (12).
3. To prevent the internal current function from interfering with this external sensing mode, the Current Adjust control on the front panel should be turned to its maximum, fully clockwise position. This circuit may be more positively deactivated by disconnecting the jumper link on terminals (4)-(5) at the rear.
4. With the supply turned on and loaded, adjust the current control resistor to obtain the required value of output current. R_C may require resetting until the resistor temperature comes to equilibrium.

C A U T I O N

When using the external sensing mode of constant current operation it is important that the load not be allowed to achieve a value that will, at the current being drawn, attempt to develop a voltage across the output exceeding the rated maximum output voltage of the Power Supply. The voltage across the output will be equal to the product of the total resistance across the output (load resistance plus sensing resistor) times output current. In the external sensing mode of current regulation the output of the supply does not crossover into constant voltage at maximum output. Consequently if the output voltage is permitted to exceed rated maximum, the regulating function of the supply becomes depreciated.

PARALLEL OPERATION (MASTER-SLAVE)

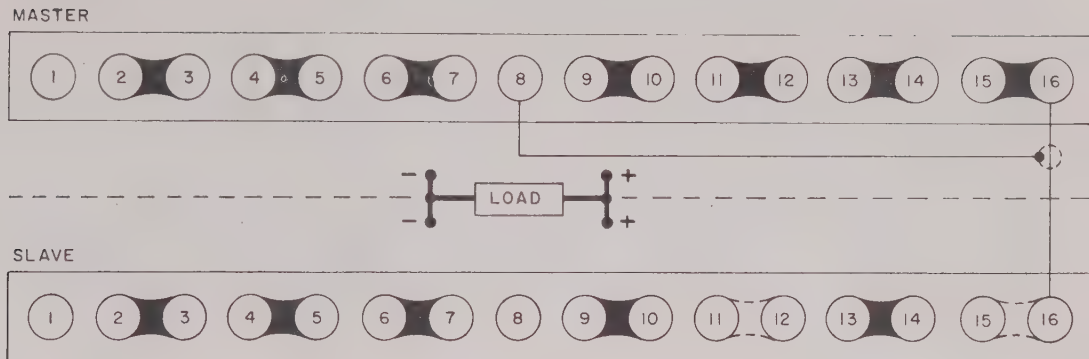

Two identical models may be paralleled in a master-slave connection to obtain higher current. In this arrangement, the pass transistors of both units are effectively in parallel with a common control derived from the master supply amplifier. (See note on following page)

1. Remove jumpers (11)-(12) and (15)-(16) on the slave unit. Join terminals (16) of both units with a shielded wire and connect the shield to terminal (8) on the master unit.
2. Connections to the load should be made with equal lengths of conductor from each power supply to insure optimum current sharing. Join front terminals only, or rear terminals only, to the load to further assist equal sharing of load current.
3. Remote error sensing, when used, is connected to the Master unit in a manner as prescribed under REMOTE ERROR SENSING.

PARALLEL OPERATION (AUTO-CROSSOVER)

The AUTO-CROSSOVER mode of parallel operation is unique with this class of equipment, and involves no special interconnection except to connect each Power Supply to the common load through approximately equal lengths of load connecting wire.

The voltage across a light load, will be controlled by whichever Power Supply has the higher voltage setting. Up to its current limit setting, this Power Supply will deliver all of the load current. The Power Supply with the lower voltage setting will idle at zero current until the current limit point of the first supply is reached by the load. At this point the first supply will switch to current regulation at its limit value and the load voltage will start to fall. The voltage will fall only to the voltage setting of the second supply whereupon this Power Supply will begin to deliver current to the load and will control its voltage. The current through the load will be the sum of the current from each supply.

The two voltage controls on the paralleled Power Supplies should be set as close together as possible, minimizing the small voltage drop when Supply No. 1 switches to current regulation. When the two voltage controls are set to the same voltage, the Power Supplies will share the load and the relative current from each Power Supply can be controlled by adjusting the relative settings of the voltage controls.

When two paralleled power supplies are set to widely different voltages, and the supply with the higher setting is in control, a current flow is set up through the voltage control of the idle supply equal to the output voltage divided by the resistance of the voltage control setting of the idling supply.

To prevent this current from becoming excessive, a minimum setting of the lower voltage control must be observed. A minimum of 1/10th the setting of the higher (controlling) voltage control is recommended.

Do not allow the lower setting to approach zero since the current can become large enough to damage the control.

Note: For either of the foregoing methods of parallel operation, simultaneous application and removal of line power is required.

2.3 INTERNAL ADJUSTMENT PROCEDURES

Internal circuit adjustments for output voltage and current are contained in the Supply. These are preset at the factory and should require readjustments only following the replacement of a circuit related component, or when required in conjunction with one of the special programming applications.

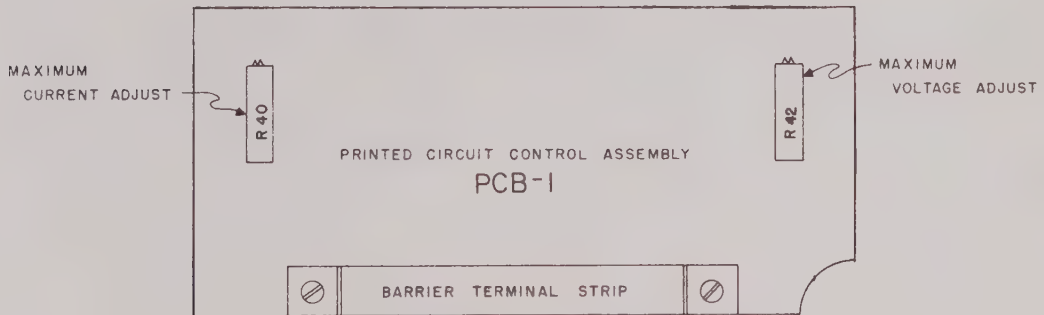


Figure 2.3-a LOCATION OF ADJUSTING CONTROLS FOR MAXIMUM CURRENT AND VOLTAGE


The controls are located on the printed circuit control assembly as shown in Figure 2.3. Access to the controls is made by removing the top and rear cover plates from the Power Supply.

1. Maximum Voltage Adjust.- This adjusts the constant current ratio between the resistance of the Voltage Control, either internal or external, and the output voltage. This control ratio is intended to have a nominal value of 100 ohms per volt, but is made adjustable around that value to allow exact setting of the output voltage to the Voltage Control resistance.
 - a. To adjust for the front panel Voltage Control, turn both front panel controls, Voltage and Current to their maximum (clockwise) position. With no load connected, turn the Maximum Voltage Adjust to obtain an output voltage approximately 2% higher than the rated maximum.
 - b. To adjust for an external control, first set the external control to its maximum position, and turn the Maximum Voltage Adjust to obtain an output voltage equal to the maximum resistance of the external control divided by 100. This value can be 2% higher than the rated maximum output voltage of the unit.
2. Maximum Current Adjust.- This sets the upper end of the range for the Current Adjust control at the front panel (or an external control, if one is used). It is adjusted so that the Current Adjust control when set to its maximum, will not

produce more than approximately 2% higher than the rated maximum current.

- a. Connect a variable load to the output through an accurate external ammeter.
- b. Set the output voltage to maximum rated output voltage; turn the Current Adjust control to its maximum (clockwise) position; turn the Maximum Current Adjust to maximum clockwise position.
- c. Starting from no-load, increase load current to obtain an output current approximately 2% higher than rated maximum. Adjust the Maximum Current Adjust to obtain an output current approximately 2% higher than rated maximum.

The following adjustments are factory made and should not be disturbed unless required by a component change.

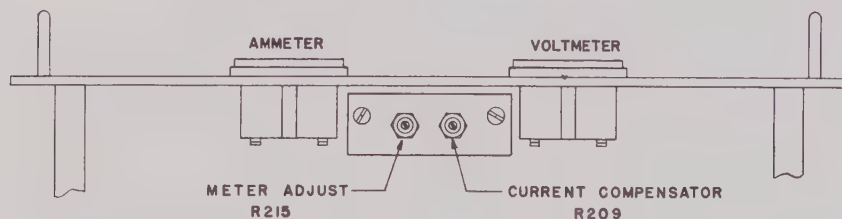

(METERED MODELS ONLY)

Figure 2.3-b LOCATION OF CURRENT COMPENSATOR AND METER ADJUST

A current compensation adjustment is mounted behind front panel as shown in Figure 2.3-b. For models with output current of 24 amperes and higher an ammeter calibration control is included on the same mounting assembly.

3. Current Compensation (Constant Current Mode)

Adjustment Control R209 coupled with R210, R54, and R55 compensates for the internal loading of the voltmeter and voltage bridge circuit in constant current operation. Without this compensation, constant current regulation is degraded.

The initial adjustment of R209 is made at the factory and would require re-adjustment only after a component change or where a significant change is made in internal loading.

The adjustment is made at a load current of 10-20% of maximum current to achieve best resolution of setting. A differential voltmeter with better than one millivolt resolution is required to measure a voltage drop of

approximately one volt across a current measuring resistor of suitable value (see page 4.1-2). A test load resistance, across which is connected a shorting switch, is used to introduce maximum compliance excursion for the measurement.

With the shorting switch engaged and current flowing through the measuring resistor set the differential voltmeter to zero. Dis-engage the shorting switch and note deflection on meter. Rotate R209 to minimize this deflection on repeated tests.

4. Ammeter Adjust (25 ampere models and up)

Connect an external, calibrated ammeter and variable load to the supply and adjust load current to equal maximum rated value. Rotate R215 to adjust deflection of panel ammeter to this value.

5. PRE-REGULATOR ADJUSTMENT



Figure 2.3-c LOCATION OF ADJUSTING CONTROLS FOR PRE-REGULATOR

INSTRUMENTS REQUIRED:

- (a) Oscilloscope, Tektronix Model 502 or equal.
- (b) Voltmeter, 20 K ohms/V, Weston Model 980 or equal.
- (c) Variable Resistive Load, Kepco Model 6212 or equal, to fully load power supply.
- (d) Line Voltage Adjustor, Kepco Model 920B, or variable auto-transformer.
- (e) Shorting Switch - heavy duty, or Circuit Breaker.

PROCEDURE:

- (1) Connect Resistive Load to output terminals of Power Supply under test, in parallel with Shorting Switch. Leave Shorting Switch open.
- (2) Connect Voltmeter across Pass Elements, between Collectors (minus) and junction of emitter resistors (plus). Note: In sixty volt units, which have two sets of pass elements, connect across the main (NOT the slave) group of pass elements only.
- (3) Connect the Scope Leads across the conductor which connects the cathode(s) of the SCR(s) to the positive terminal of the input capacitor. This wire (or buss bar) then becomes a low value sensing resistor for the observation of current pulses. Caution -- to avoid ground loop shorting effects,

differential input operation of the Scope is recommended.

- (4) Connect the Power Supply line cord to the Line Voltage Adjustor, and set input to 105V.
- (5) Set R322, the Line Voltage Correction Adjustment to its maximum counter-clockwise position and set R311, the Pass Element Voltage Adjustment to approximately the center of its range.
- (6) Turn on the Power Supply and set to maximum rated output voltage.
- (7) Slowly increase the load until maximum output current is reached while observing the voltage across the pass elements (V_x) on the voltmeter. If this voltage tends to fall below 2 volts, readjust R311 to maintain it above this value; otherwise loss of regulation will occur.
- (8) When maximum rated output current is reached, adjust the Power Supply front panel current control to put unit on the current mode (E_o max., I_o max.).
- (9) Adjust the Scope controls so that a regular series of current pulses are observed.
- (10) Adjust R311 so that the pass voltage (V_x) is set to approximately 3 ± 0.2 volts.
- (11) Using the 920B Line Voltage Adjuster, (or equal) change the input from 105V to 125V and note the change in V_x as read by the meter.
- (12) Return the input to 105V. Turn R322 slightly clockwise (increase). V_x will change, since R322 and R311 interact. Readjust R311 to return V_x to its proper value.
- (13) Again change the line input to 125V, while noting the change in V_x . Check the current pulse waveform on the Scope for any sign of irregularity or instability.
- (14) Repeat procedure as outlined in Paragraphs 12 and 13 until the change in V_x (ΔV_x) is set at the minimum value which still allows stable operation. Irregularity or lack of symmetry of the current pulse waveform as displayed on the Scope indicates that R322 should be backed off slightly (counter-clockwise).
- (15) When above adjustments are completed, short the output by closing the shorting switch, and again measure ΔV_x as the line input voltage is varied between 105V and 125V.
- (16) Some over-regulation may be observed; that is, V_x may increase as line voltage is lowered and vice versa.
- (17) If over-regulation is noted at short-circuit, R322 and R311 should be readjusted to make the under-regulation increment, ΔV_x , at maximum output voltage, approximately equal to the over-regulation increment, ΔV_x , at short-circuit. Several successive readjustments may be required.

SECTION 3.0 CIRCUIT DESCRIPTION

See Diagram on Page 3.1-2

The automatic voltage/current crossover characteristic of the KS series entails two separate control channels each with its comparison bridge circuit and associated error amplifier. In voltage mode operation the VOLTAGE BRIDGE senses the voltage at the power supply terminals (or load terminals in remote sensing) and compares this voltage to a zener reference voltage. Through voltage proportioning resistors R_V and R_{VC} a control signal is produced at V, V' and amplified by Q2 and Q3.


For current mode operation the CURRENT BRIDGE senses the voltage drop across the current sensing resistor, R_S , and compares this voltage to a zener reference voltage. Through voltage proportioning resistors R_I and R_{IC} a control signal is produced at I, I' and amplified by Q9 and Q10.

Output of each amplifier is directed to an 'OR' type gate which determines the mode of operation for control of the pass transistors. This gate consists of Q4 and Q5 with their emitters connected to a common resistor at E. The voltage at point E reflects the higher voltage level between the current and voltage amplifier outputs. From this point the control signal is amplified by Q7 and coupled to the pass driver by emitter follower, Q6.

The operating mode of the system is mutually dependent upon the voltage control setting, the current control setting, and the load resistance. The characteristic crossover point is uniquely defined by that ratio of the voltage and current setting which equals the load resistance (crossover resistance).

For a visual indication of the mode of operation, VIX panel indicators V and I are included. These are driven by transistors Q11 and Q12. Access to these drivers are provided for remote indication and for control applications by standard pin jack connections located at the rear. A ± 8 volt excursion occurs during the crossover transition.

SECTION 3.0 CIRCUIT DESCRIPTION-----MODEL KS POWER SUPPLY SIMPLIFIED DIAGRAM

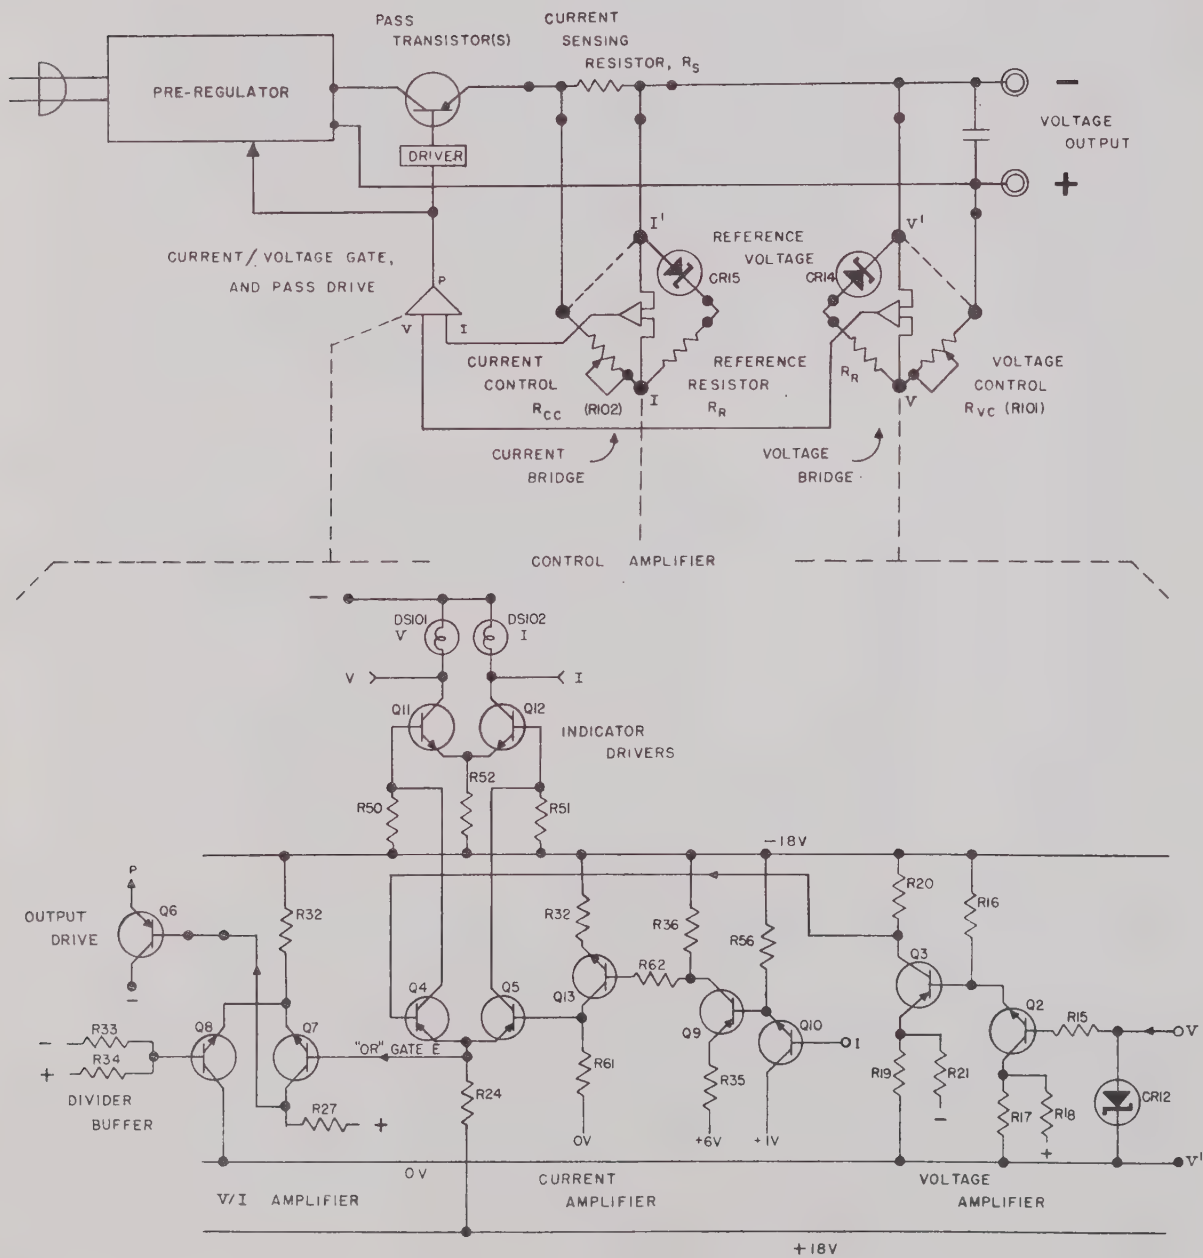

SECTION 3.0 CIRCUIT DESCRIPTION: PRE-REGULATOR

The Model KS pre-regulator system is designed to maintain a minimum, controlled voltage across the transistor pass elements. This function may be likened to a coarse control ahead of the transistor pass elements, which serve as the fine control. In this way minimum pass element dissipation is achieved with resulting greater overall efficiency.

A simplified diagram of the system is shown on page 3.1- 4. Three combinations of rectifiers and SCR's to form full wave rectification are shown. The essential operating principle to be described is the same for any of the combinations.

Input to the pre-regulator is derived from PI-PO, consisting of the drop across the pass elements plus a component of voltage from the divider resistor R204. This component reduces the loop gain variations over the total voltage excursion, resulting from an essentially linear control operating on a sine wave power source.



A variation in voltage across PI-PO, reflecting a change in line, load, or voltage control setting, alters the conduction of Q303 to change the charging rate of "ramp" capacitor C306. At a specific potential across C306, uni-junction Q302 triggers, supplying a negative pulse to Q304 amplifier. The positive excursion generated at the collector of Q304 feeds the gate electrode(s) of the SCR(s) to switch power into the system.

The combination of C306, R310, Q303, and R311 constitute a "ramp" timing system, with the slope of the ramp a variable factor dependant upon the base signal at Q303 and the setting of R311. An increasing voltage drop at PI-PO reduces conduction through Q303, thereby reducing the ramp slope and, correspondingly, the SCR firing angle to lower the voltage at PI-PO.

At the start of the timing cycle a synchronizing pulse from Q301 discharges C306 at a time coincident with the zero crossover of the input sine wave power. The source for this synchronizing signal is the positive excursions of voltage developed across zener clipper CR307 from a full wave rectified voltage in phase with the voltage applied to the SCR.


Controls R311 and R322 are factory adjustments. R311 sets the voltage across the pass elements. R322 is set to minimize the variation in this voltage over the specified change of input line voltage. (See schematic diagram).

SECTION 3.0 CIRCUIT DESCRIPTION: PRE-REGULATOR

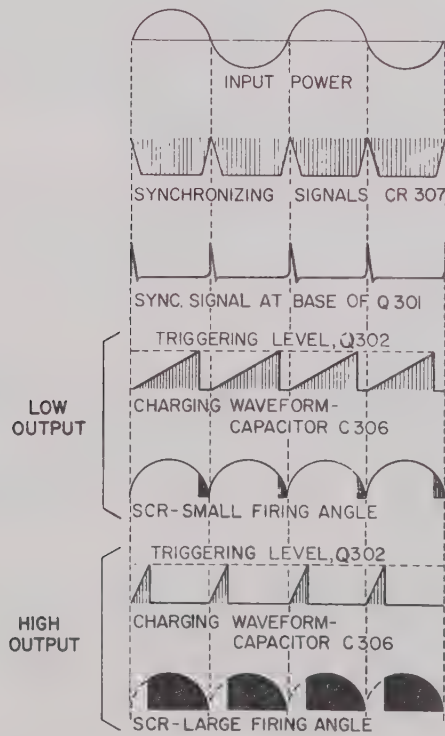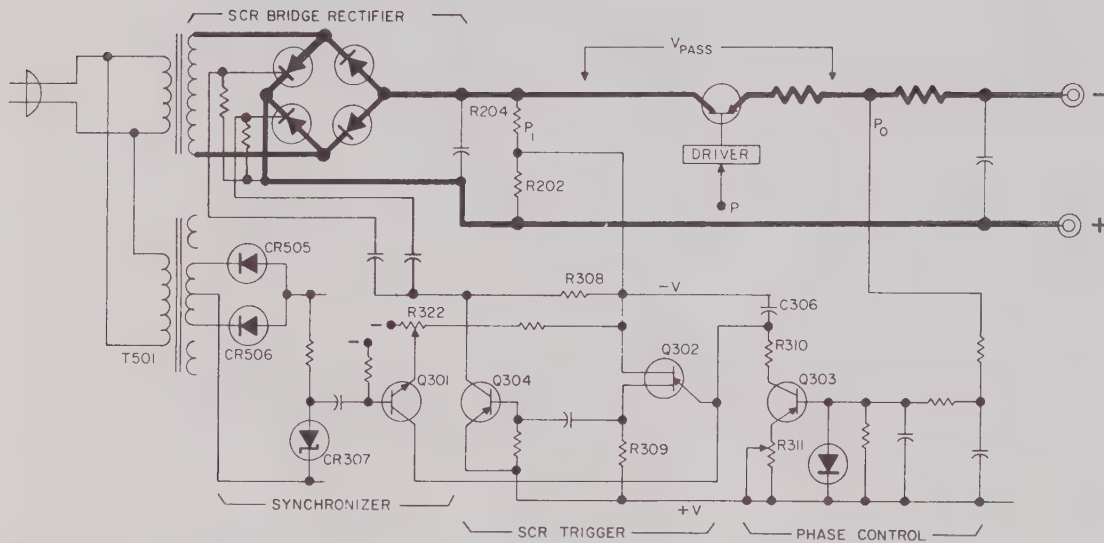

TIMING WAVEFORM
(IDEALIZED)

SECTION 3.0 CIRCUIT DESCRIPTION-----REFERENCE VOLTAGE CIRCUIT

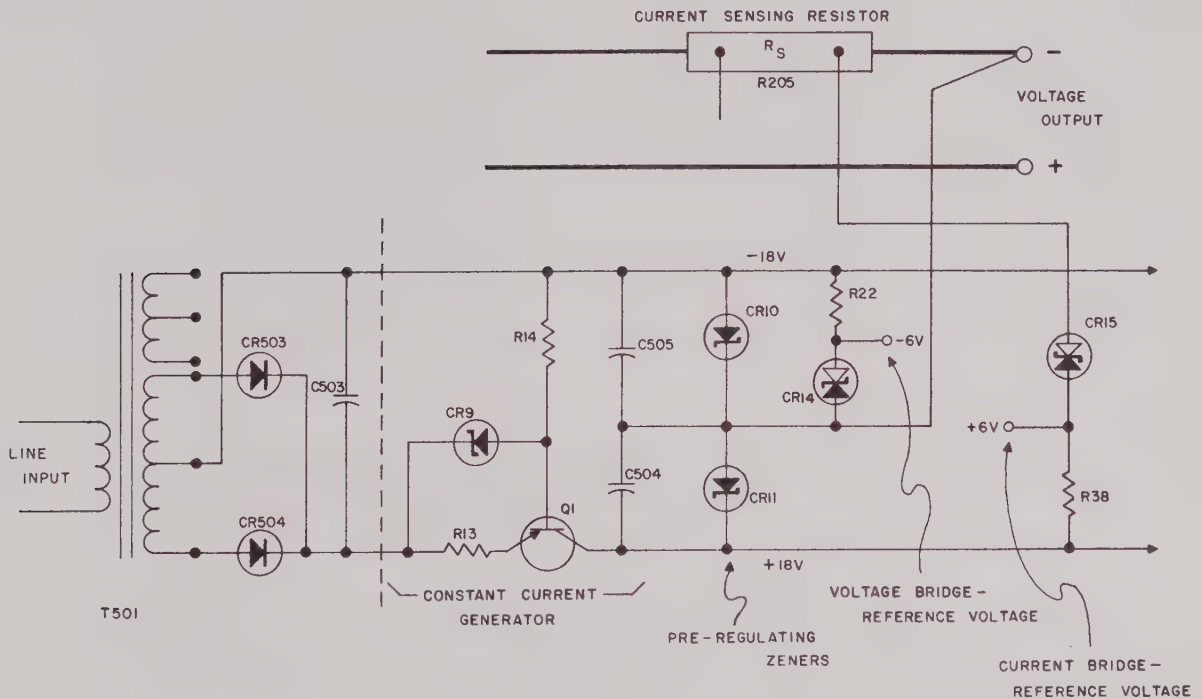

Rectified and filtered DC is applied to a constant current generator consisting of regulating transistor Q1 and associated components. The regulated voltage across Zener CR9 controls Q1 to maintain this voltage across R13. Constant current must, therefore, flow through R13, Q1, and the connected circuits. With constant current flowing through CR11 and CR10 a -18 volts and + 18 volts source is developed, independent of line variations.

Regulated current flows through temperature compensated Zeners CR14 and CR15 through respective resistors R22 and R38. These Zeners provide the reference voltage for the voltage bridge and current bridge respectively.

The ± 18 volts source serves also as the operating voltages for the control amplifiers.

SECTION 4.0 POWER SUPPLY MEASUREMENTS

Measurement of the significant parameters of a power supply is a requirement for incoming inspection, periodic maintenance, or repair check. Since these measurements require special techniques to insure correct results, suggestions for their performance are included herewith.

Required Instrumentation:

- 1) A constant AC supply voltage with provisions for adjusting or "stepping" the voltage over a specified region (105-125 volts). A variable auto-transformer is generally adequate, if it is rated to deliver the input current requirements of the power supply without significant change in output voltage.
- 2) A resistor load, or equal, to fully load the supply at constant voltage or fully absorb the compliance voltage at constant current. Provisions for on-off switching is desirable.
- 3) Voltage Monitor -
 - a) A differential voltmeter with a resolution of 1 millivolt or better, or a power supply analyzer such as the Kepco Regulation Analyzer, Model 901C, which displays the regulation percentage directly.
 - or b) A DC coupled oscilloscope with better than 1 millivolt per centimelts deflection sensitivity and a suitable "buck-out" voltage source of equal magnitude and comparable or better stability than the voltage under test.

The FOUR-TERMINAL NETWORK is an essential device for precise measurement of regulation. In Figure 1 is shown the location of sensing leads for

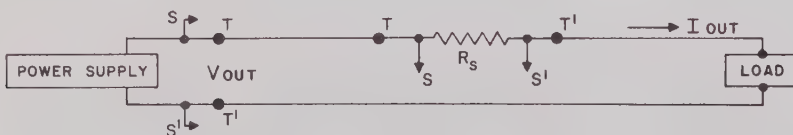


Figure 1 VOLTAGE AND CURRENT SENSING

Proper monitoring of output voltage or load current (voltage drop across sensing resistor, R_s). It is to be noted that the sensing leads (S)(S') for V out are connected to the power supply side of output terminals (T)(T'), and for I out, across the current sensing resistor, R_s , within R_s terminal connections (T)(T'). The function of the four-terminal network (T)(T') - (S)(S') is the elimination of contact resistance at (T)(T') from the sensing circuit. This resistance is of significant magnitude at moderate to high currents where a high order of regulation measurement is to be made.

VOLTAGE REGULATION is defined as the amount of output voltage change resulting from a specified change of line voltage or output load. The measurement is made at the rear terminals of the power supply in the manner shown in Figure 2, which is a practical compromise to the requirement of a 4-terminal network.

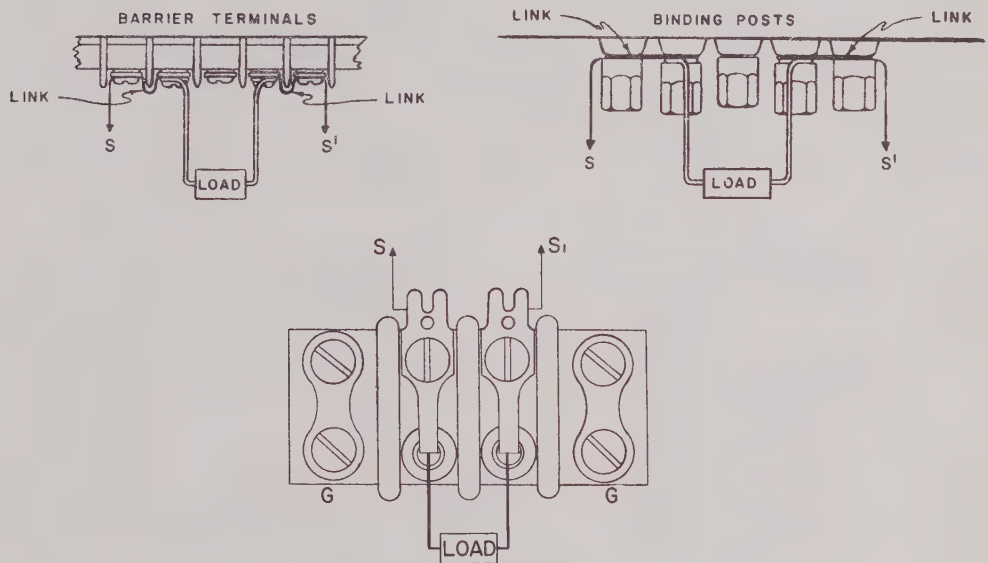


Figure 2

CURRENT REGULATION is defined as the amount of current change resulting from a specified change in line voltage or output load. The measurement is made by monitoring the drop across a sensing resistor that develops approximately one volt. This resistor must be selected for low temperature coefficient and high wattage - over ten times the actual wattage - to reduce changes in the sensing resistance resulting from heating. Consideration must be given to current drawn by devices connected to the power supply terminals other than the useful load through which constant current is desired. Such devices will degrade current regulation. External voltmeters should be of the high impedance type with higher than 100 megohms input.

RIPPLE - An oscilloscope or true RMS indicating meter may be used with consideration given to DC blocking (a 0.1 mfd capacitor of suitable voltage is generally adequate). The peak-to-peak oscilloscope measurement divided by 3 is reduced to an RMS value to a first order approximation if the observed signal approaches a sine waveform.



REPLACEMENT PARTS LIST

POWER SUPPLY MODEL KS 8-50M

Code 3-1264

Page 1 of 3

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
B201, 202	2	Motor	Barber Colman KYAF764-1	148-0006
C201-204	4	Capacitor, Electrolytic, Can 40 K μ f, 30 v	General Electric 43F1942MA3	117-0364
C205	1	Capacitor, Electrolytic, Pigtail 500 μ f, 50 v	Industrial Cond. 1B1163RM	117-0221
C206	1	Capacitor, Electrolytic, Pigtail 200 μ f, 100 v	General Electric 43F2536AA1	117-0358
C209, 210	2	Capacitor, Electrolytic, Pigtail 1 K μ f, 6 v	Industrial Cond. 1B1382-RM	117-0346
CR201	1	Rectifier Assembly Includes the following:	Kepco Inc.	124-0193
	1	Capacitor, Ceramic 0.05 μ f, 500 v, 20%	Sprague Electric 19C242	117-0061
	1	Capacitor, Mylar 5 μ f, 200 v, 20%	Good All X663F	117-0372
	2	Rectifier, Silicon, Stud Type	International Rect. 4325	124-0177
	2	Rectifier, Silicon, Stud Type	Westinghouse 2N1910	124-0139
	2	Resistor, Fixed, Molded 220 ohm, 1/2 w, 10%	Allen Bradley EB2211	115-0371
CR203, 204	2	Rectifier, Silicon, Pigtail	Columbus CEC-105	124-0133
CR207	1	Rectifier, Silicon, Pigtail	Automatic PT-5	124-0028
DS101, 102	2	Pilot Light Assembly	Drake Mfg. 7-503	152-0071
F101	1	Fuse, Slo Blo 15 a	Bussman MDA-15	141-0059
F102	1	Fuse, Slo Blo 1 a, 250 v	Bussman MDL-1	141-0047
*M101	1	Meter, Volt 0-10 v	General Electric 8DW91V290AH2	135-0232
*M102	1	Meter, Amp. 0-50 a	General Electric 8DW91A326CR2	135-0186
R101	1	Resistor, Variable, Multiturn 1 K ohm, 3 w, 3%	Spectrol 510	115-1304
R102	1	Resistor, Variable, Multiturn 50 ohm	Spirotech Model 225	115-1448

*Metered Models Only

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.



REPLACEMENT PARTS LIST

POWER SUPPLY MODEL KS 8-50M

Code 3-1264

Page 2 of 3

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
R201, 206	2	Resistor, Fixed, Power, Strip 1 ohm, 20 w, 5%	Ward Leonard 20S1	115-0690
R202	1	Resistor, Fixed, Power, Axial 10 K ohm, 3 w, 5%	Sprague Electric 151E-10K	115-0460
R205	1	Resistor, Error Sensing 0.01 ohm, 50 w, 1%	Kepco Inc.	115-1525
R207, 208	2	Resistor, Fixed, Power, Strip 5 ohm, 40 w, 5%	Ward Leonard 40S5	115-0970
R209	1	Resistor, Variable, Composition 25 K ohm, 2 w, 10%	Allen Bradley JA1L040S253UZ	115-0182
R210	1	Resistor, Fixed, Composition 470 ohm, 1/2 w, 5%	Corning Glass C20	115-1573
R211	1	Resistor, Fixed, Fused, Oxide 10 K ohm, 1/2 w, 5% (Non-metered Unit Only)	Corning Glass C20	115-1493
R213	1	Resistor, Fixed, Power, Strip 1 K ohm, 10 w, 5%	Hardwick Hindle 3/4 BR-56-1000	115-1206
R215	1	Resistor, Variable, Composition 100 ohm, 2 w	Allen Bradley JA1L040S101UZ	115-1540
R216	1	Resistor, Fixed, Power, Axial 100 ohm, 3 w, 5%	Ward Leonard 3X100	115-0471
RL201	1	Relay 25 a, 115 v	Hart Mfg. WV115A3-099	140-0058
S101	1	Switch, Toggle, SPST 15 a, 125 v	Carling Electric AA252-63XKEP2	127-0107
T201	1	Transformer	Kepco Magnetics	100-1388
A901, 902, 903	3	Pass Assembly Includes the following:	Kepco Inc.	110-0194
	2	Transistor, PNP	Delco	**119-0016
	2	Resistor, Fixed, Precision, WW 0.05 ohm, 5 w	Tepro Electric TS5W	115-1523
A904	1	Pass Assembly Includes the following:	Kepco Inc.	110-0196
	2	Transistor, PNP	Delco	**119-0016
	2	Resistor, Fixed, Precision, WW 0.05 ohm, 5 w	Tepro Electric TS5W	115-1523
	1	Resistor, Fixed, Molded 39 ohm, 1/2 w, 10%	Allen Bradley EB3901	115-0623

**See Field Replacement Page

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.



REPLACEMENT PARTS LIST

POWER SUPPLY MODEL KS 8-50M

Code 3-1264

Page 3 of 3

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
A905	1	Pass Assembly Includes the following:	Kepco Inc.	110-0195
	2	Transistor, PNP	Delco	**119-0016
	2	Resistor, Fixed, Precision, WW 0.05 ohm, 5 w	Tepro Electric TS5W	115-1523
	1	Thermostat N.C.	Chatham Controls DRSCORP73C	127-0093
A906	1	Driver Assembly Includes the following:	Kepco Inc.	110-0197
	1	Transistor, PNP	Delco	**119-0016
	1	Transistor, PNP	Delco	**119-0034
	1	Resistor, Fixed, Molded 5.6 K ohm, 1/2 w, 10%	Allen Bradley EB5621	115-1201
	1	Resistor, Fixed, Power, Axial 1 K ohm, 3 w, 5%	Tepro Electric TS3C	115-1302
	1	Resistor, Fixed, Power, Strip 125 ohm, 10 w, 5%	Hardwick Hindle Type 3/4 BRS-56	115-1429

**See Field Replacement Page

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.



REPLACEMENT PARTS LIST

AMPLIFIER BOARD ASSEMBLY PCB#1 MODEL KS 8-50M

Code 10-964

Page 1 of 2

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
C7	1	Capacitor, Mylar, Pigtail 0.033 μ f, 200 v, 10%	Good All 663UW	117-0347
C9, 13	2	Capacitor, Mylar, Pigtail 0.4 μ f, 200 v, 10%	Hopkins Eng. P42MK	117-0128
C10	1	Capacitor, Mylar, Pigtail 0.2 μ f, 200 v, 10%	Hopkins Eng. P22MK	117-0236
C11	1	Capacitor, Mylar, Pigtail 0.5 μ f, 200 v, 10%	Hopkins Eng. P52MK	117-0123
CR9, 12	2	Zener Diode	Transitron SV125	121-0028
CR10, 11	2	Zener Diode	Motorola 1N3026B	121-0036
CR14, 15	2	Zener Diode	International Rect. 1N821	121-0041
CR16, 17	2	Rectifier, Silicon, Pigtail	Electronic Devices	124-0178
Q1	1	Transistor, PNP	Delco	**119-0016
Q2, 7, 8, 10, 11, 12, 13	7	Transistor, Silicon, NPN	General Electric	**119-0054
Q3, 4, 5, 6, 9	5	Transistor, Silicon, PNP	Hughes	**119-0055
R13	1	Resistor, Fixed, Power, Axial 125 ohm, 3 w, 5%	Tepro Electric TS3C	115-1467
R14	1	Resistor, Fixed, Power, Axial 6 K ohm, 3 w, 3%	Hardwick Hindle 9/16 GA6K LTC	115-1155
R15	1	Resistor, Fixed, Molded 560 ohm, 1/2 w, 10%	Allen Bradley EB5611	115-0451
R16, 56	2	Resistor, Fixed, Precision, WW 36 K ohm, 2 w, 5%	Tepro Electric TS2C	115-1313
R17, 31, 52, 59	4	Resistor, Fixed, Molded 100 ohm, 1/2 w, 10%	Allen Bradley EB1011	115-0626
R18	1	Resistor, Fixed, Molded 430 ohm, 1/2 w, 5%	Allen Bradley EB4315	115-0581
R19, 37	2	Resistor, Fixed, Precision, WW 10 ohm, 3 w, 5%	Ward Leonard 3X10	115-0421
R20	1	Resistor, Fixed, Power, Axial 13 K ohm, 1 w, 5%	Tepro Electric TS1W	115-1309
R21, 35	2	Resistor, Fixed, Precision, WW 1.2 K ohm, 1 w, 5%	Tepro Electric TS1W	115-1306
R22, 38	2	Resistor, Fixed, Precision, WW 510 ohm, 1 w, 1%	Tepro Electric TS1W	115-1466
R23	1	Resistor, Fixed, Molded 1.1 K ohm, 1/2 w, 5%	Allen Bradley EB1125	115-0448

**See Field Replacement Page

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.



REPLACEMENT PARTS LIST

AMPLIFIER BOARD ASSEMBLY PCB#1 MODEL KS 8-50M

Code 10-964

Page 2 of 2

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
R24	1	Resistor, Fixed, Molded 12 K ohm, 1/2 w, 10%	Allen Bradley EB1231	115-1168
R25	1	Resistor, Fixed, Molded 1 K ohm, 1/2 w, 5%	Allen Bradley EB1021	115-0547
R27	1	Resistor, Fixed, Molded 5.6 K ohm, 1/2 w, 10%	Allen Bradley EB5621	115-1201
R28	1	Resistor, Fixed, Precision, WW 570 ohm, 1 w, 1%	Tepro Electric TS1W	115-1465
R32	1	Resistor, Fixed, Molded 1.8 K ohm, 1/2 w, 10%	Allen Bradley EB1821	115-0473
R33	1	Resistor, Fixed, Precision, WW 6.2 K ohm, 1 w, 5%	Tepro Electric TS1W	115-1335
R34	1	Resistor, Fixed, Precision, WW 2.5 K ohm, 1 w, 5%	Tepro Electric TS1W	115-1307
R36	1	Resistor, Fixed, Power, Axial 10 K ohm, 3 w, 5%	Sprague Electric 151E-10K	115-0460
R40	1	Resistor, Variable 150 ohm, 1/2 w, 10%	Bourns 3067P-1-151	115-1534
R41	1	Resistor, Fixed, Precision, WW 510 ohm, 1 w, 1%	Tepro Electric TS1W	115-1466
R42	1	Resistor, Variable 100 ohm, 1/2 w, 10%	Bourns 3067P-1-10-1	115-1434
R44	1	Resistor, Fixed, Molded 300 ohm, 1/2 w, 5%	Allen Bradley EB3015	115-0783
R46	1	Resistor, Fixed, Molded 2.4 K ohm, 1/2 w, 5%	Allen Bradley EB2425	115-0795
R50, 51	2	Resistor, Fixed, Molded 2.2 K ohm, 1/2 w, 10%	Allen Bradley EB2221	115-0466
R54	1	Resistor, Fixed, Molded, Glass 91 K ohm, 1/2 w, 5%	Corning Glass C20	115-1440
R55	1	Resistor, Fixed, Precision, WW 1 ohm, 1 w, 1%	Tepro Electric TS1W	115-1361
R57	1	Resistor, Fixed, Molded 330 ohm, 1/2 w, 10%	Allen Bradley EB3311	115-0804
R61	1	Resistor, Fixed, Power, Axial, WW 5 K ohm, 3 w, 5%	Hardwick Hindle 9/16 GA5000 LTC	115-1094
R62	1	Resistor, Fixed, Molded 2 K ohm, 1/2 w, 5%	Allen Bradley EB2025	115-0520

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.



REPLACEMENT PARTS LIST

SCR CONTROL BOARD ASS'Y PCB#2 MODEL KS 8-50M

Code 3-1264

Page 1 of 2

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
C303,311	2	Capacitor,Mylar 0.05 μ f, 200 v, 10%	Hopkins Eng. P052M	117-0362
C305,306 314	3	Capacitor,Mylar 0.1 μ f, 200 v, 10%	Hopkins Eng. P12M	117-0363
C307,310, 313	3	Capacitor,Mylar 0.5 μ f, 200 v, 10%	Hopkins Eng. P52MK	117-0123
C308	1	Capacitor,Mylar 0.1 μ f, 600 v, 20%	Hopkins Eng. P16M	117-0316
C312	1	Capacitor,Mylar,Pigtail 1 μ f, 200 v, 10%	Hopkins Eng. 1P2MK	117-0207
CR306	1	Rectifier,Silicon,Pigtail	Automatic PT-5	124-0028
CR307	1	Zener Diode	Transitron SV125	121-0028
CR308	1	Zener Diode	Motorola 1N3026B	121-0036
CR309,310	2	Rectifier,Silicon,Pigtail	Columbus CEC-105	124-0133
Q301	1	Transistor,Silicon,NPN	General Electric	**119-0054
Q302	1	Transistor,Unijunction	General Electric	**119-0048
Q303,304	2	Transistor,Silicon,PNP	Hughes	**119-0055
R302	1	Resistor,Fixed,Molded 10 K ohm, 1 w, 10%	Allen Bradley GB1031	115-0040
R303	1	Resistor,Fixed,Molded 8.2 K ohm, 1/2 w, 10%	Allen Bradley EB8221	115-1169
R305	1	Resistor,Fixed,Molded 39 ohm, 1 w, 10%	Allen Bradley GB47G1	115-1170
R306	1	Resistor,Fixed,Molded 6.8 K ohm, 1/2 w, 10%	Allen Bradley EB6821	115-0857
R307	1	Resistor,Power,Axial 2 K ohm, 5 w, 5%	Ward Leonard 5X2000	115-0568
R308	1	Resistor,Fixed,Molded 470 ohm, 1/2 w, 10%	Allen Bradley EB4711	115-0608
R309	1	Resistor,Fixed,Molded 330 ohm, 1/2 w, 10%	Allen Bradley EB3311	115-0804
R310	1	Resistor,Fixed,Molded 3.3 K ohm, 1/2 w, 10%	Allen Bradley EB3321	115-0439
R311	1	Resistor,Variable 5 K ohm, 1/2 w, 10%	Bourns 3067S-1-502	115-1363
R312	1	Resistor,Fixed,Molded 1800 ohm, 1/2 w, 10%	Allen Bradley EB1821	115-0473

**See Field Replacement Page

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.



REPLACEMENT PARTS LIST

SCR CONTROL BOARD ASS'Y PCB#2 MODEL KS 8-50M

Code 3-1264

Page 2 of 2

SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
R313,314	2	Resistor,Fixed,Molded 10 K ohm, 1/2 w, 10%	Allen Bradley EB1031	115-0489
R318	1	Resistor,Fixed,Molded 10 ohm, 1/2 w, 10%	Allen Bradley EB1001	115-0502
R319	1	Resistor,Fixed,Molded 1 K ohm, 1/2 w, 10%	Allen Bradley EB1021	115-0547
R320	1	Resistor,Fixed,Molded 33 K ohm, 1/2 w, 10%	Allen Bradley EB3331	115-1127
R321	1	Resistor,Fixed,Molded 220 ohm, 1/2 w, 10%	Allen Bradley EB2211	115-0371
R322	1	Resistor,Variable 500 ohm, 1/4 w, 20%	Allen Bradley FR500M	115-1501
R323	1	Resistor,Fixed,Molded 100 ohm, 1/2 w, 5%	Allen Bradley EB1015	115-0341

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.

PLEASE NOTE: THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.



REPLACEMENT PARTS LIST

REFERENCE ASS'Y, PCB#3, ASS'Y A5, KS 8-50(M)

Code 9-2065

Page 1 of 1


SCHEMATIC NO.	QTY.	DESCRIPTION	MFRS. NAME & PART NO. (See Note)	KEPCO PART NO.
C501	1	Capacitor, Electrolytic, Pigtail 20 μ f, 150 v	General Electric 43F2271AA2	117-0145
C502	1	Capacitor, Electrolytic, Pigtail 1 K μ f, 10 v	General Electric 43F2381AA2	117-0176
C503	1	Capacitor, Electrolytic, Pigtail 150 μ f, 75 v	General Electric 43F7147AA1	117-0388
C504, 505	2	Capacitor, Electrolytic, Pigtail 22 μ f, 25 v	General Electric 76F02KE226	117-0503
C506	1	Capacitor, Electrolytic, Pigtail 500 μ f, 50 v	General Electric 43F2528AA1	117-0221
CR501, 503, 504	3	Rectifier, Silicon, Pigtail	Semicon Inc. SM-140	124-0028
CR502, 505, 506, 508, 509, 510	6	Rectifier, Silicon, Pigtail	Semicon Inc. SM-110	124-0133
CR507	1	Zener Diode	Hoffman 1N1773	121-0012
K501	1	Relay, 3PDT	Omega 200PC3CX	140-0040
R501	1	Resistor, Fixed, Molded 100 K ohm, 1/2 w, 10%	Allen Bradley EB1041	115-0809
R502	1	Resistor, Fixed, Power, Axial 1 K ohm, 5 w, 5%	Ward Leonard 5X1000	115-0512
R503	1	Resistor, Power, Axial 2.5 K ohm, 3 w, 5%	Ward Leonard 3X2500	115-0469
R504	1	Resistor, Fixed, Molded 47 ohm, 1/2 w, 10%	Allen Bradley EB4701	115-0718
R505	1	Resistor, Fixed, Power, Axial 2 K ohm, 5 w, 5%	Ward Leonard 5X2000	115-0568
T501	1	Transformer	Kepco Magnetics	100-1462

REPLACEMENT PARTS MAY BE ORDERED FROM KEPCO, INC. ORDERS SHOULD INCLUDE KEPCO PART NUMBER AND DESCRIPTION.



PLEASE NOTE THE MANUFACTURER'S NAME AND PART NUMBER LISTED FOR EACH ITEM ON REPLACEMENT PARTS LISTS, REPRESENTS AT LEAST ONE SOURCE FOR THAT ITEM AND IS LISTED SOLELY FOR THE CONVENIENCE OF KEPCO EQUIPMENT OWNERS IN OBTAINING REPLACEMENT PARTS LOCALLY. WE RESERVE THE RIGHT TO USE EQUIVALENT ITEMS FROM ALTERNATE SOURCES. KEPCO, INC.

FIELD REPLACEMENT LIST

Kepco <u>Part No.</u>	<u>Description</u>	<u>Recommended Replacement</u>	
		<u>MFR.</u>	<u>MFR. No.</u>
119-0016	Transistor, PNP	Delco	2N174
119-0020	Transistor, PNP	RCA	2N398A
119-0022	Transistor, PNP	Tung Sol Texas Instrument	2N1707 2N404
119-0024	Transistor, NPN	General Inst. RCA, General Elec. Texas Instrument Sylvania, Texas Instrument	2N1605 2N388 2N1308
119-0034	Transistor, PNP	Delco Hughes	2N1172 2N1131A
119-0035, 0036, 0037	Transistor, PNP	Motorola Clevite	2N1167 CTP 3553
119-0038	Transistor, NPN	Transitron	ST29
119-0048	Transistor, Unijunction	General Electric	2N1671A
119-0049	Transistor, PNP	Delco	2N669
119-0054	Transistor, NPN	General Electric	2N338 2N336A
119-0055	Transistor, PNP	Hughes	2N1131A
119-0056	Transistor, NPN	General Electric	2N336A
119-0057	Transistor, PNP	Delco	DTG-1200
119-0059	Transistor, NPN	RCA	2N3053
119-0060	Transistor, NPN	RCA	2N3054
119-0061	Transistor, NPN	RCA	2N3055
119-0065	Transistor, PNP	Hughes	2N3225
119-0067	Transistor, PNP	Delco	DTG-2400
119-0068	Transistor, NPN	RCA	40250
119-0069	Transistor, NPN	RCA	40251
119-0070	Transistor, NPN	RCA	2N3442

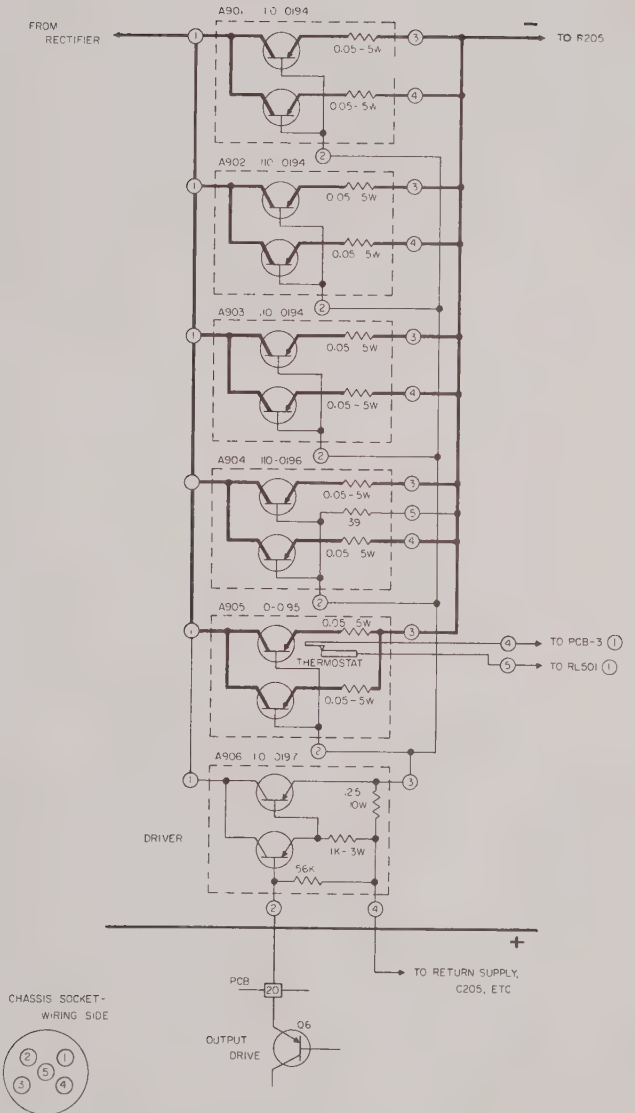


MODEL KS8-50 PASS ASSEMBLY DETAIL

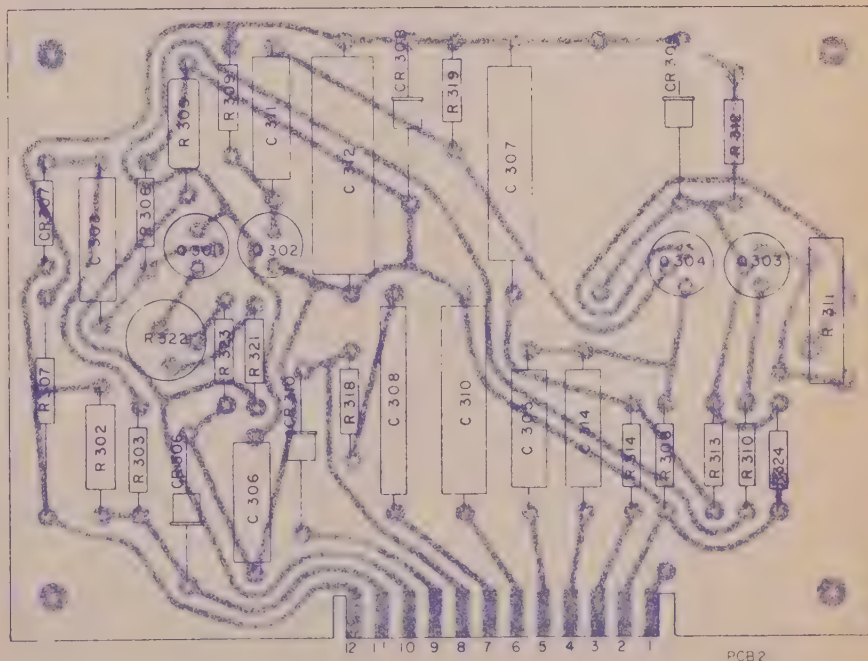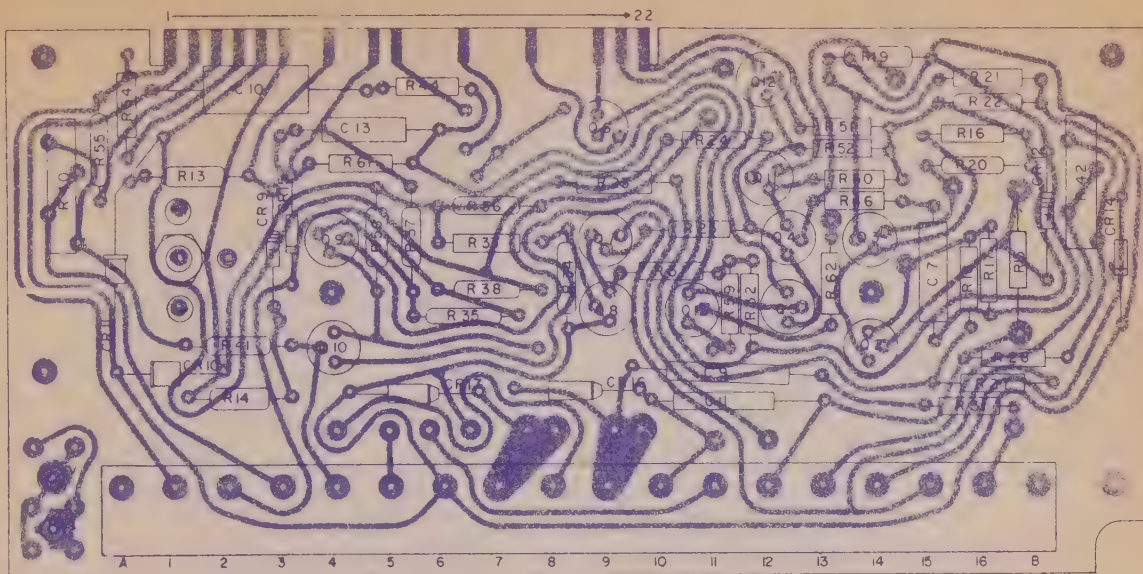

DRAWN B.D.P.	CHECKED <i>AB</i>	APPROVED <i>JB</i>	DATE 9-20-65
MODEL NO. KS 8 50 M	PART NO.	SCALE H	
TITLE PCB-1, PCB2 COMPONENT LOCATION			

KEPCO INC.
FLUSHING, N.Y.

DWG. NO. CM05305

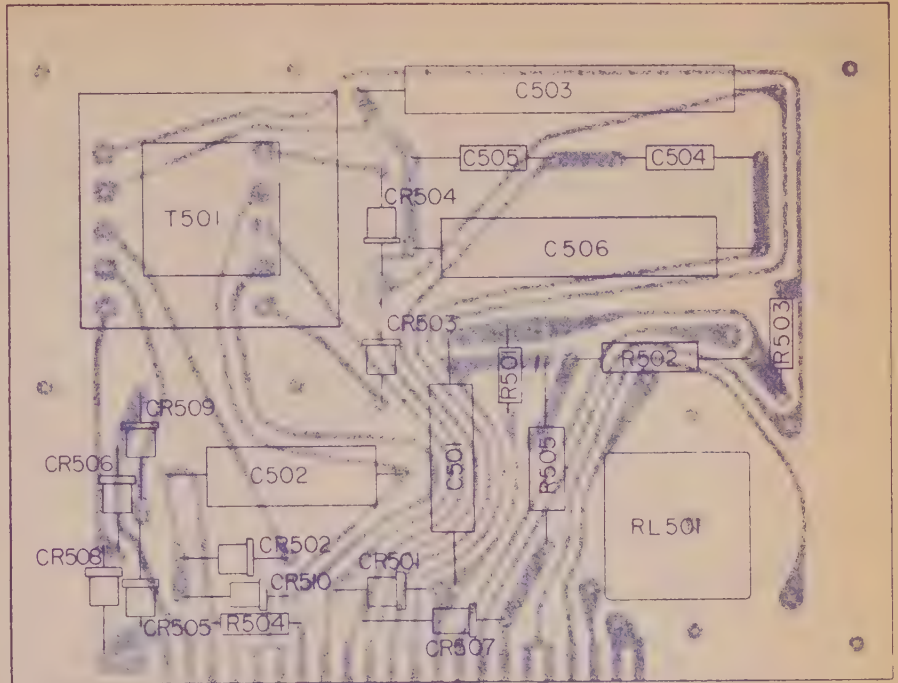

PCB-3



DRAWN B.D.P.	CHECKED REC	APPROVED JB	DATE 9-20-65
MODEL NO. KS 8- 50 M	PART NO.		SCALE #
TITLE PCB-3, COMPONENT LOCATION			

KEPCO INC.
FLUSHING, N. Y.




CM05404

REV	DESCRIPTION	DATE	BY	CHK
1				


Q

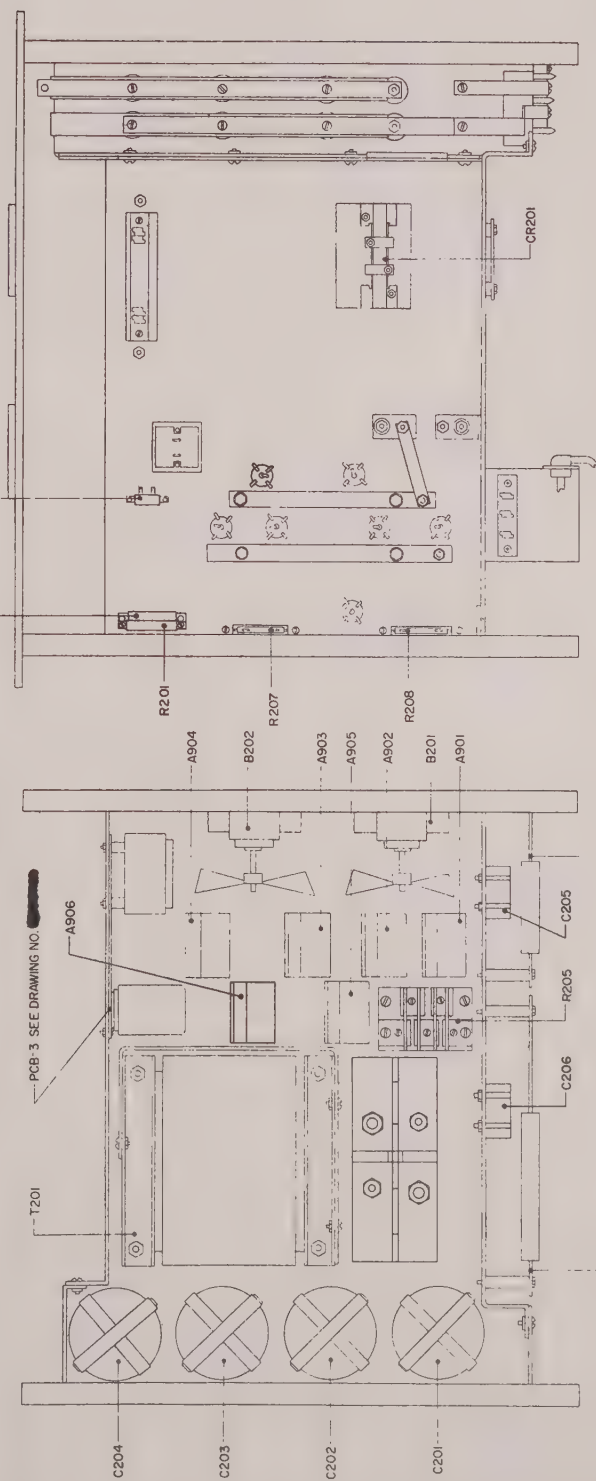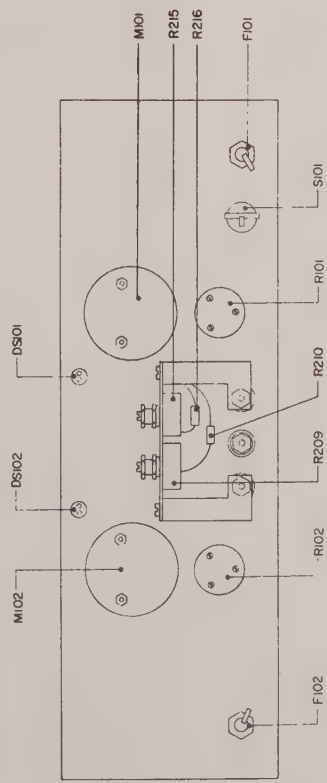

KEPCO, INC.		FLORHAM, N.J.	
COMPONENT LOCATION		3-22-64	
MODEL NO.	KS 6-50M	DATE	10/06
DWG NO.	DW0 3934	REV	1

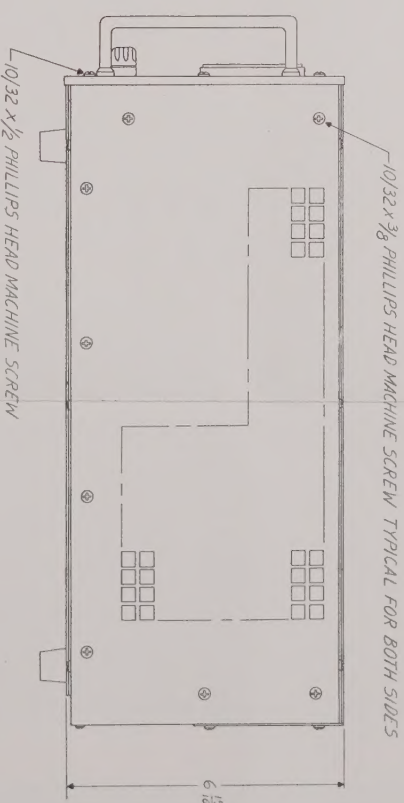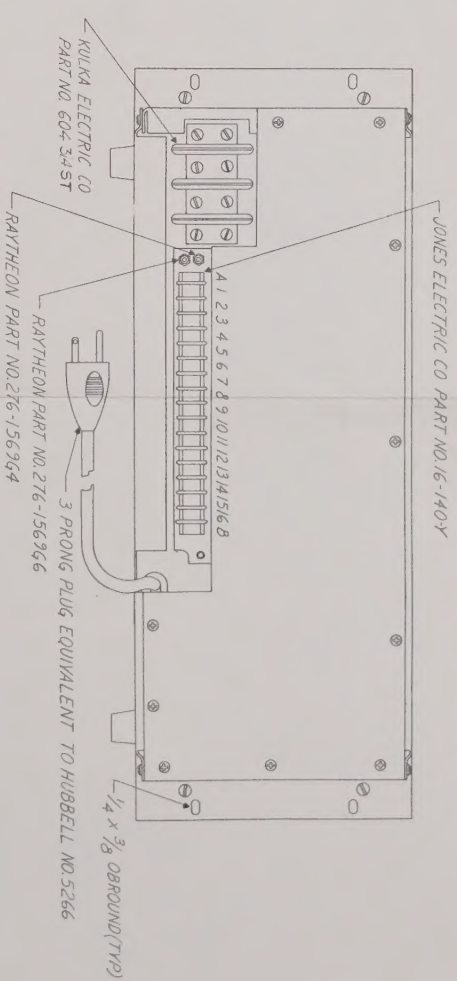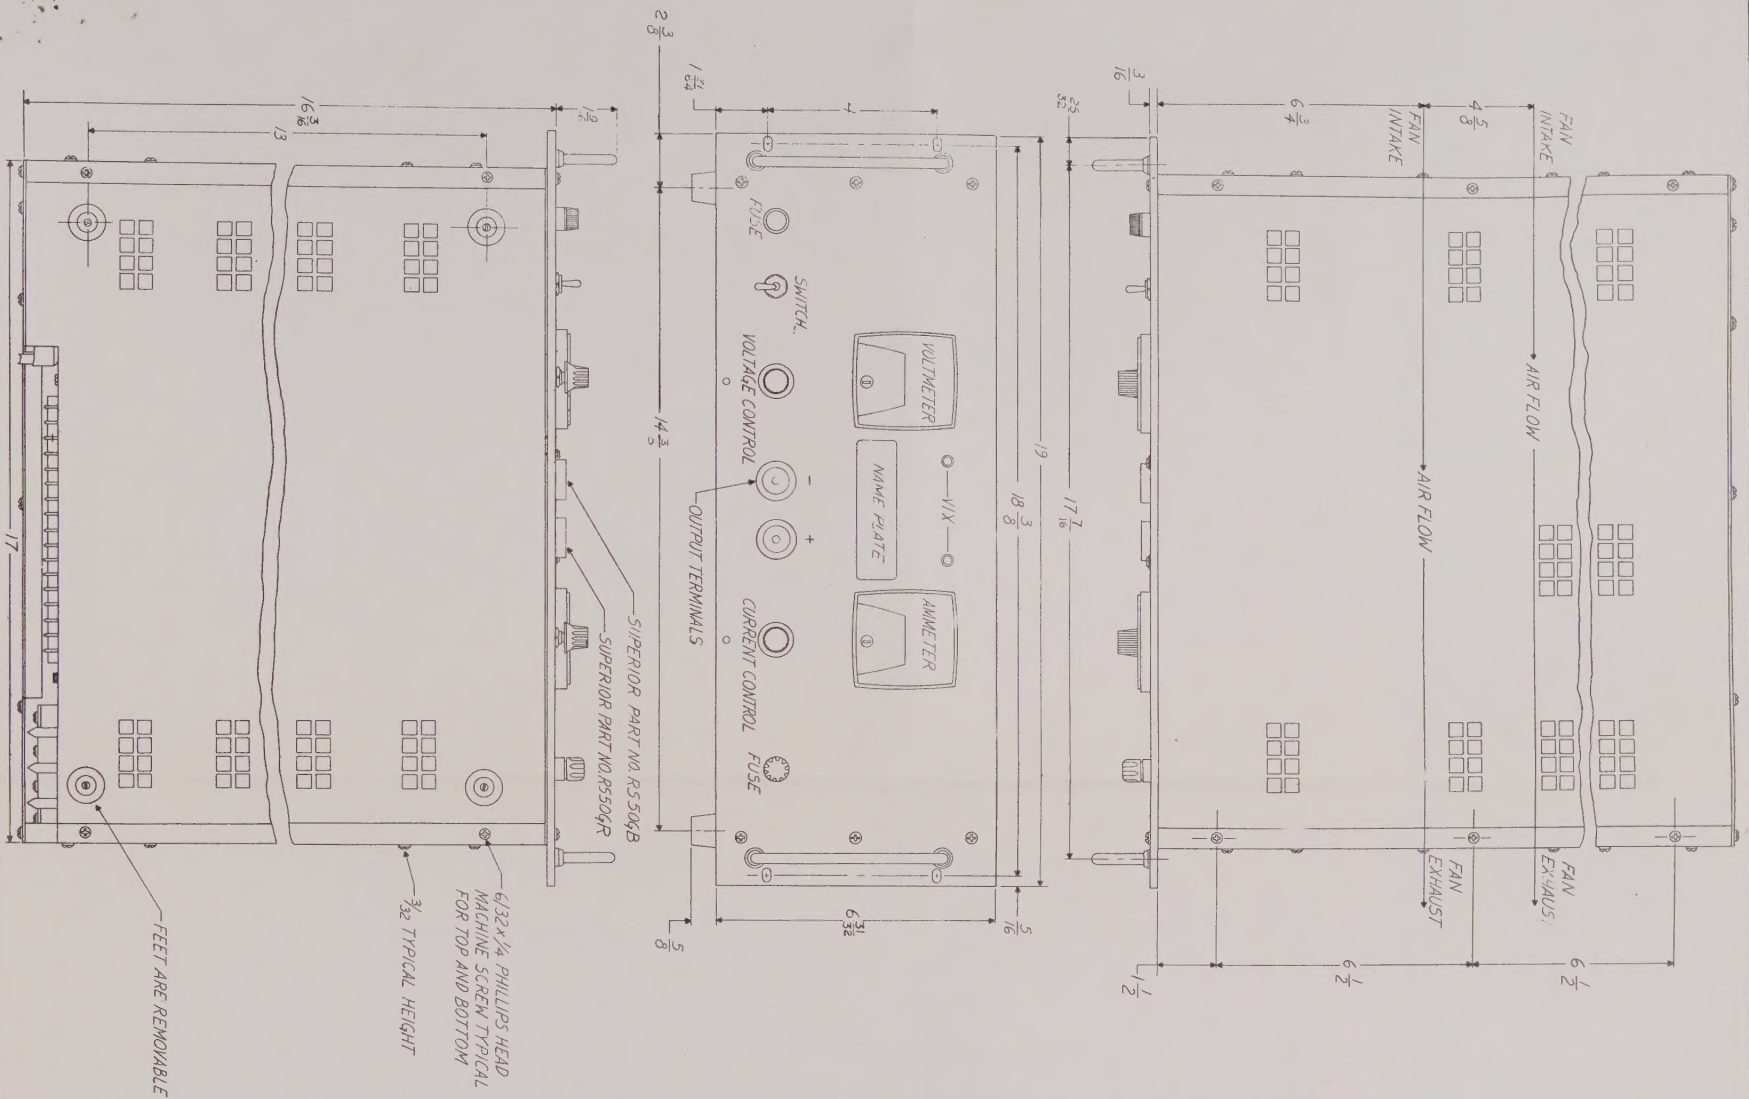

1. THIS DRAWING USED FOR MODELS K58-50M
 2. MATL. COVER NO. 16 COLLED ROLLED STEEL, CADMIUM FINISH WITH A CHROMIUM WASH, PANEL ALUM. ALLOY GRAY HAMMERTONE FINISH
 3. FUSE DATA —
- | MODEL | FUSE SIZE 101 | FUSE SIZE 102 |
|---------|---------------|---------------|
| K58-50M | 15 AMP | 1 AMP |
4. REFER TO KEPSCO CATALOG FOR DETAILED SPECIFICATIONS

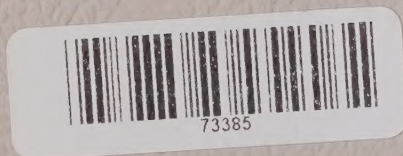

131-38 SANFORD AVENUE • FLUSHING, N.Y. 11352 • Phone (212) IN 1-7000
TWX# 212-539-6623 • Cable Address: KEPCOPOWER NEWYORK